Skidplate and Linkage Guard Installation Instructions

1. Assemble 4X clip nuts to front bracket as shown in Figure 1.
2. Assemble bracket to skidplate as shown in Figure 2 using bolts (B) and washers (E). Holes are slotted in case extra adjustment is needed. Also assemble extra bumper pad if using built-in linkage guard.
3. Loosely install bolts (A) through the front of the bike frame into both sides of the bracket.
4. Loosely install bolts (C) and bushing (F) into the lower mounting holes in frame.
5. Lastly, torque all bolts.

Hardware Diagram

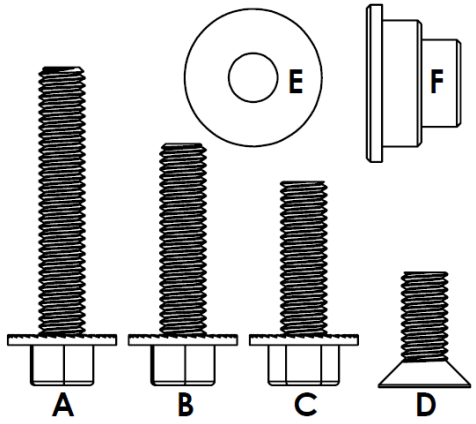

Figure 1 – Front Bracket

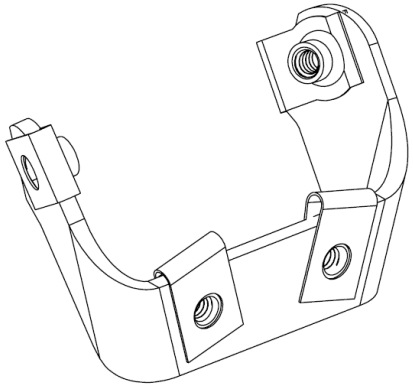

Figure 2 – Skidplate Assy

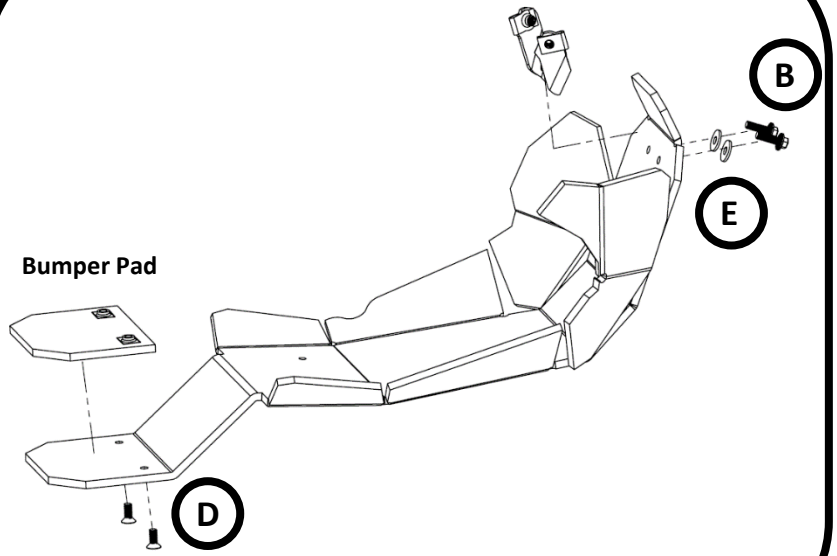

Note: Tighten D until the head of the bolt is flush with the plastic.

Figure 3 – Assy of Skidplate to Motorcycle

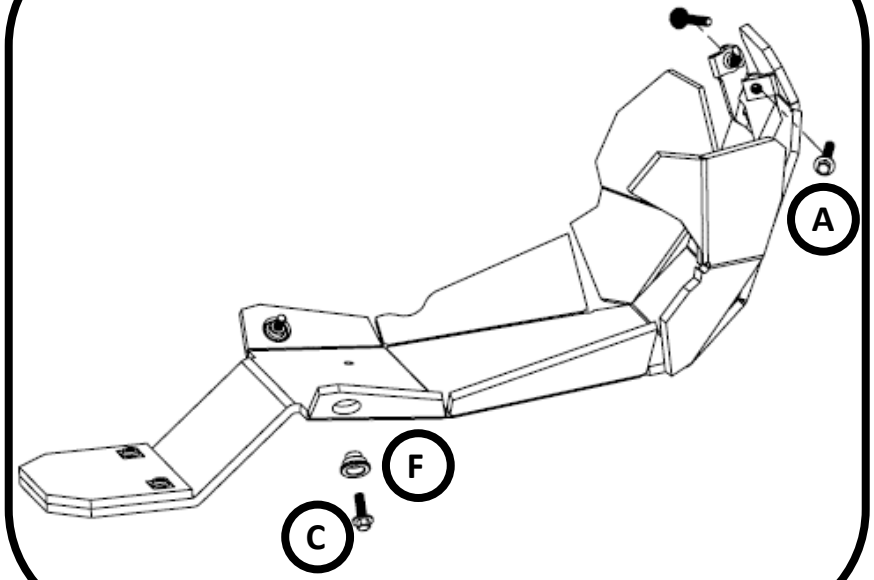

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.