Skidplate and Linkage Guard Installation Instructions

With Linkage Guard

1. Assemble linkage guard as shown in Figure 1.
2. Use hardware **(A), (J), (G), (F),** and some flat washers to assemble the linkage guard to the skidplate.

a. Tighten G till flush with the bottom of the plate.

3. Attach skidplate to motorcycle as shown in Figure 3.

Without Linkage Guard

1. Use hardware **(C), (H), (F)** and some flat washers to assemble the 3 plastic spacers with (J) sandwiched between spacer 1 and 2.
2. Tighten G till flush with the bottom of the plate.
3. Attach skidplate to motorcycle as shown in Figure 3.

Stack the 3 spacers as shown. With spacer A on top so that hardware (J) fits into the indented hole.

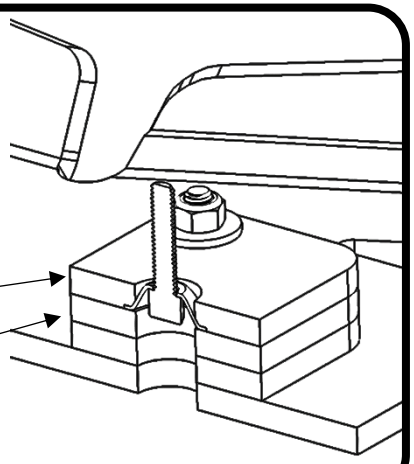

Figure 1 – Linkage Guard Assembly

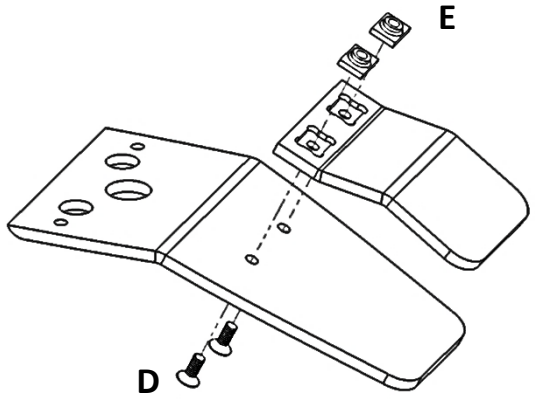

Note: Tighten D until the head of the bolt is flush with the plastic.

Figure 2 – Skidplate Assembly

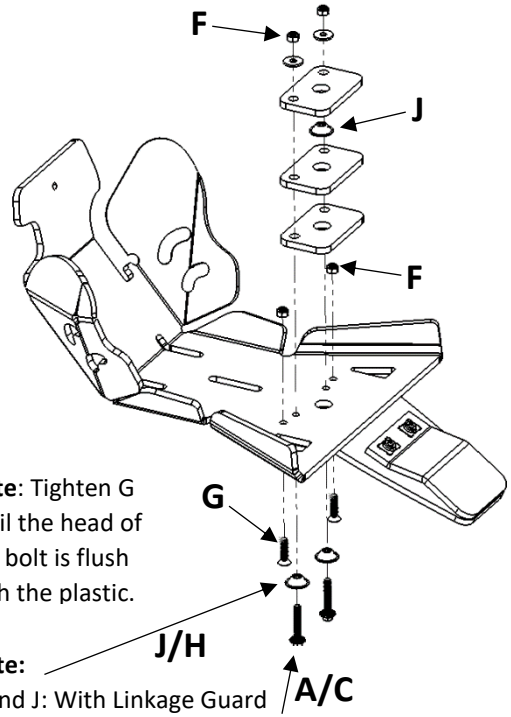

Note: Tighten G until the head of the bolt is flush with the plastic.

Note:
A and J: With Linkage Guard
C and H: Without Linkage Guard
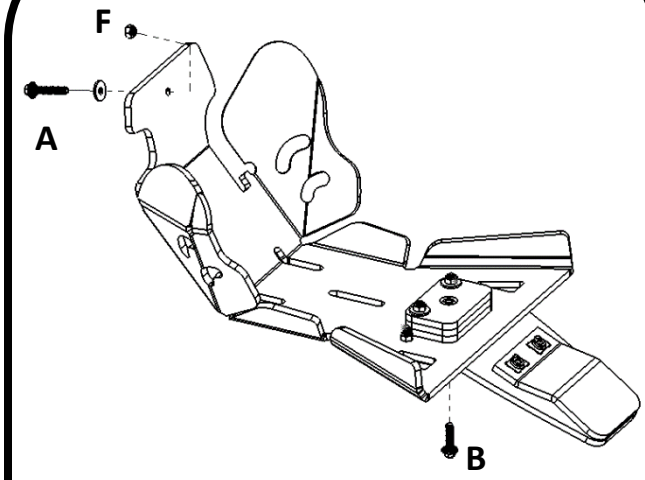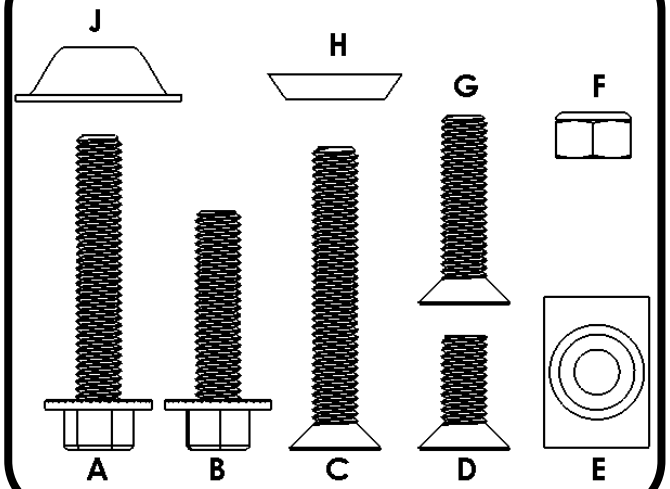
Figure 3 – Plate to Bike