Skidplate and Linkage Guard Installation Instructions

With Linkage Guard

1. Assemble linkage guard as shown in Figure 1.
2. Use hardware **(B), (C), (F), (H),** and some flat washers to assemble the linkage guard to the skidplate.

a. Tighten C till flush with the bottom of the plate.

3. Attach skidplate to motorcycle as shown in Figure 3.

Without Linkage Guard

1. Use hardware **(C), (G), (H)** and some flat washers to assemble the plastic spacer and bushing (A).
2. Tighten C till flush with the bottom of the plate.
3. Attach skidplate to motorcycle as shown in Figure 3.

Figure 1 – Linkage Guard Assembly

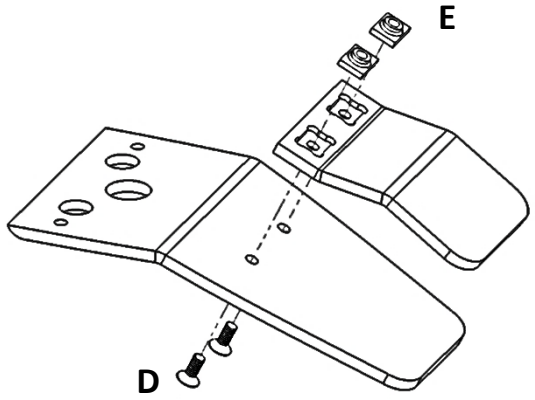

Note: Tighten D until the head of the bolt is flush with the plastic.

Figure 2 – With Linkage Guard

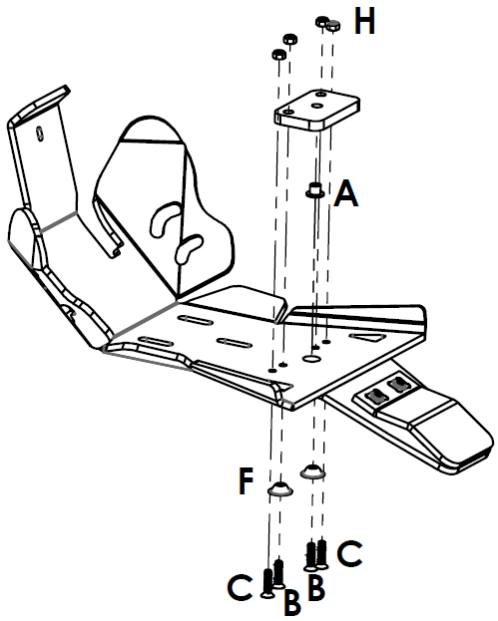

Figure 3 – Plate to Bike

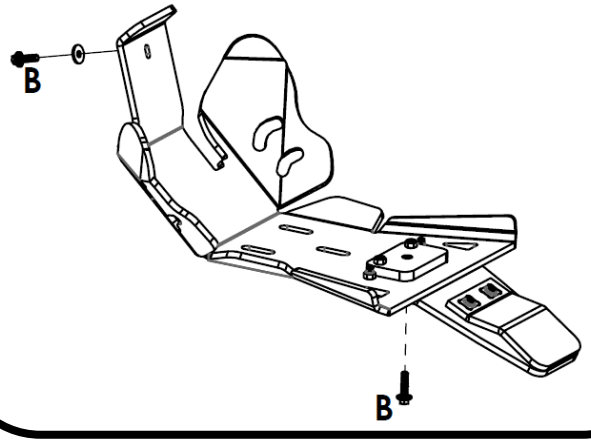

Figure 4 – Without Linkage Guard

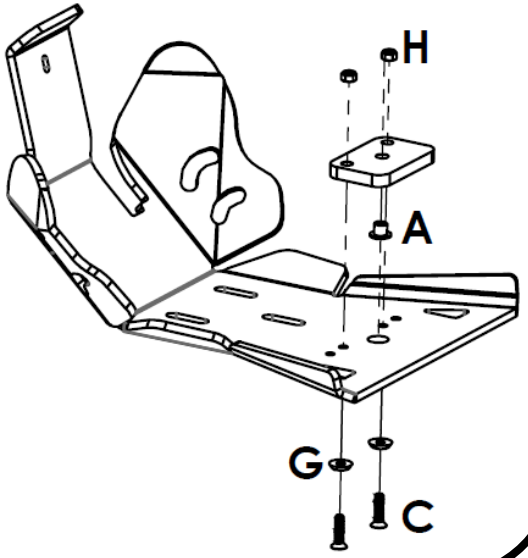

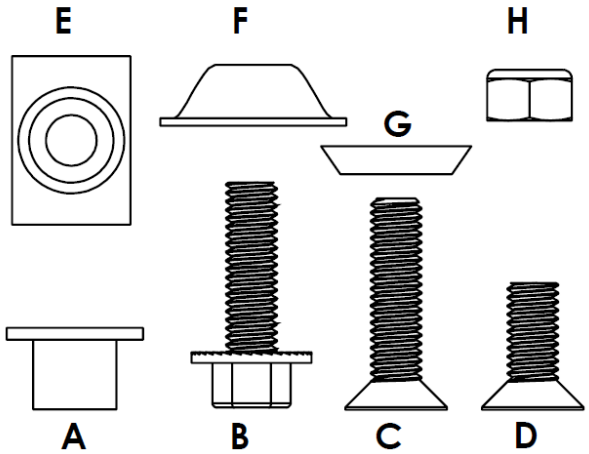

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.