Skidplate and Linkage Guard Installation Instructions

Mounting Bar

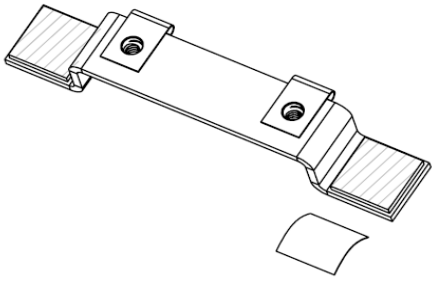

*The mounting bar comes with double-sided adhesive tape to **make future oil changes a breeze**. The **motorcycle frame must be cleaned thoroughly for the tape to stick**.*

- **Mark the desired position for the mounting bar before removing the tape liner.**
- **Remove the liner from the adhesive tape and stick the mounting bar to the frame in the marked location. This tape requires pressure; use some force.**

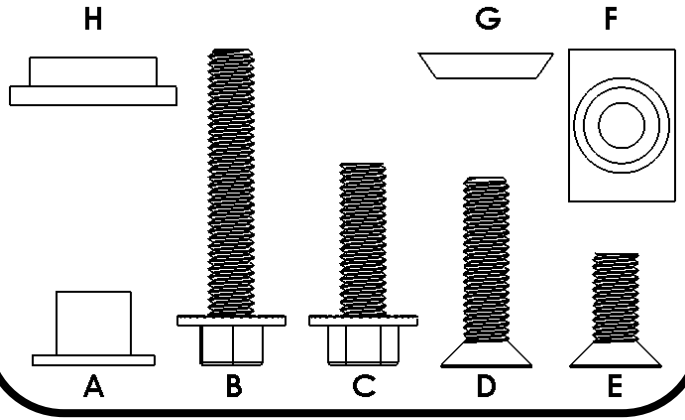

Linkage Guard Assembly

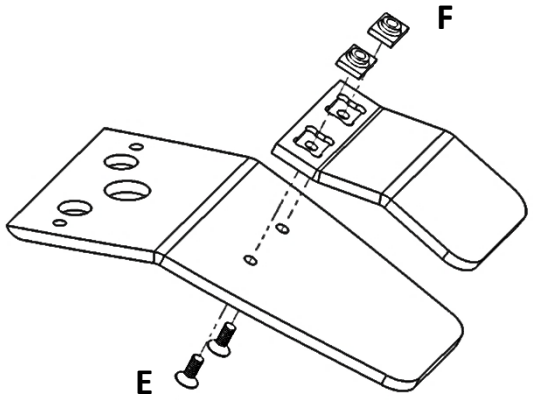

Note: Tighten E until the head of the bolt is flush with the plastic.

With Linkage Guard

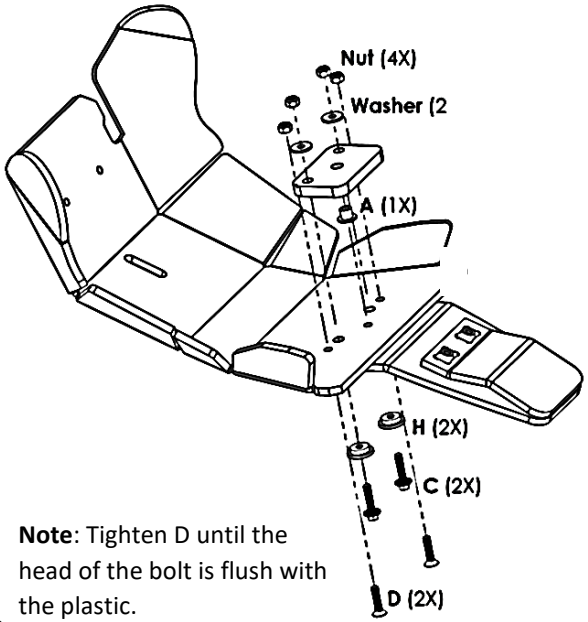

Note: Tighten D until the head of the bolt is flush with the plastic.

Installation onto Bike

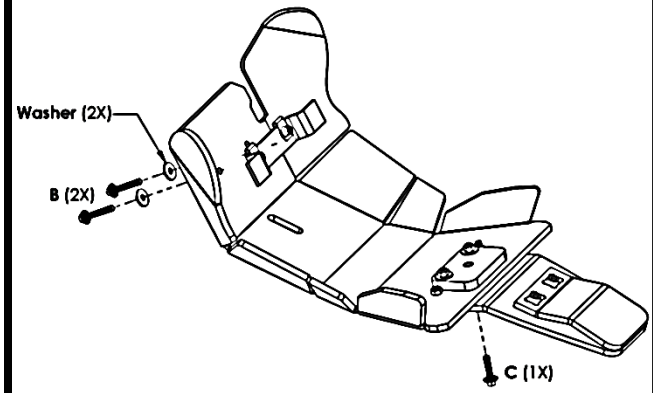

No Linkage Guard – Just Skidplate

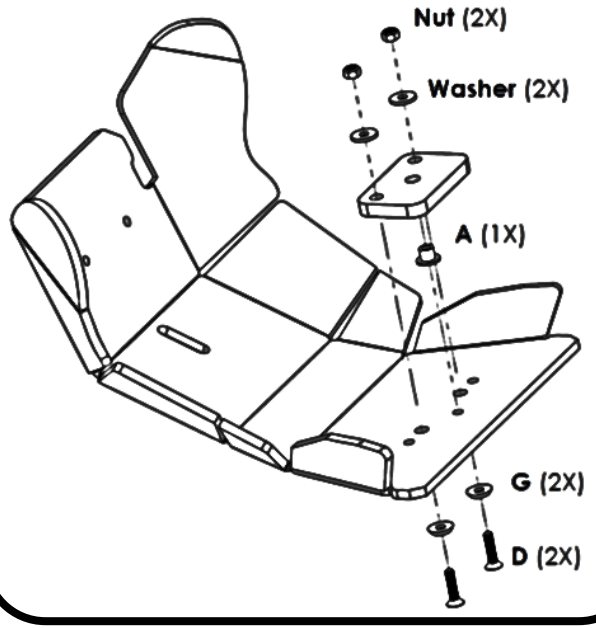

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.