Skidplate and Linkage Guard Installation Instructions

Linkage Guard Assembly

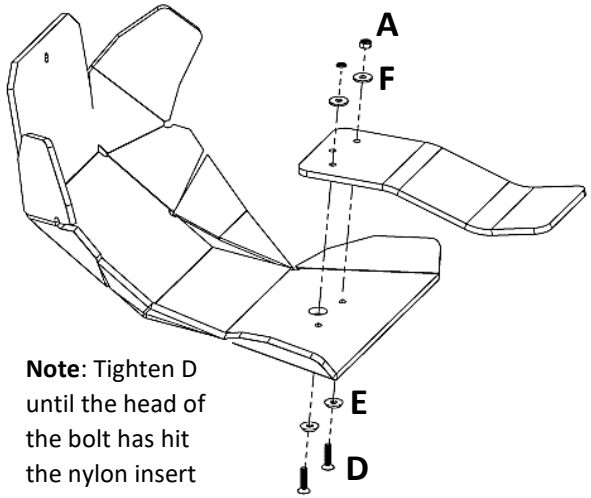

Note: Tighten D until the head of the bolt has hit the nylon insert in A.

No Linkage Guard

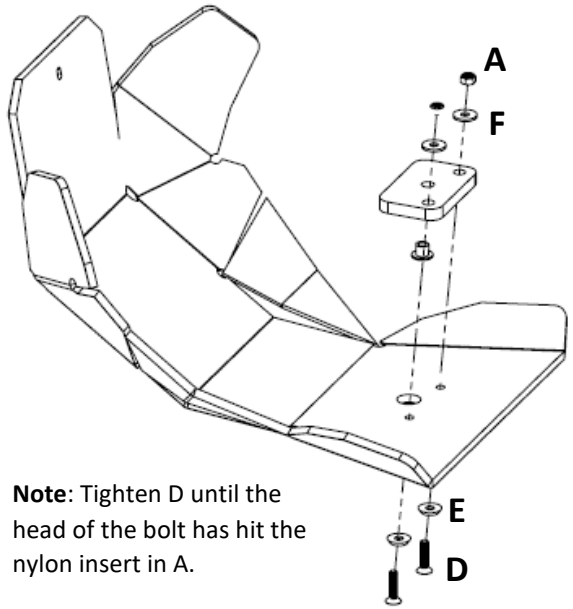

Note: Tighten D until the head of the bolt has hit the nylon insert in A.

Hardware

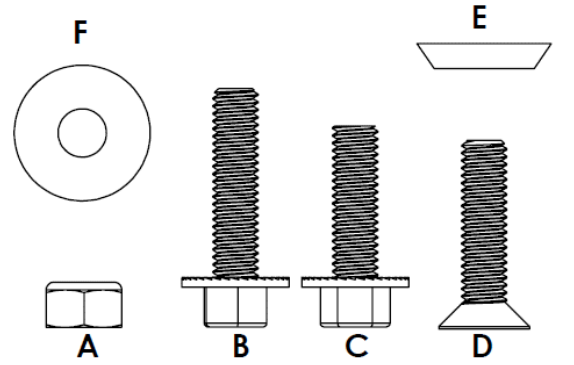
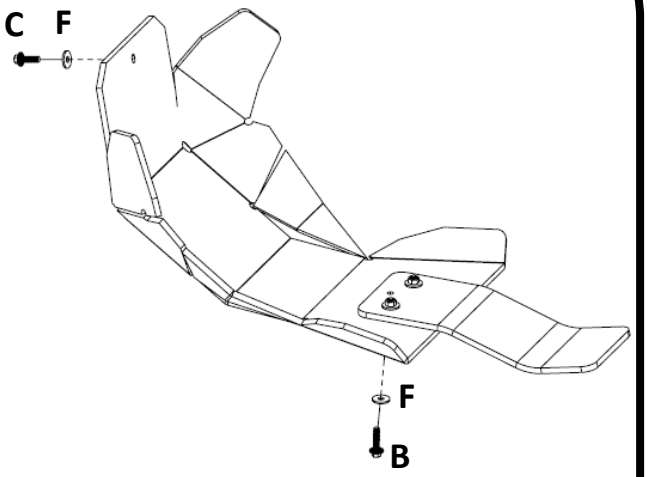
Installation onto Bike