Installation Instructions

Tenere 700 Skidplate

Hardware Chart

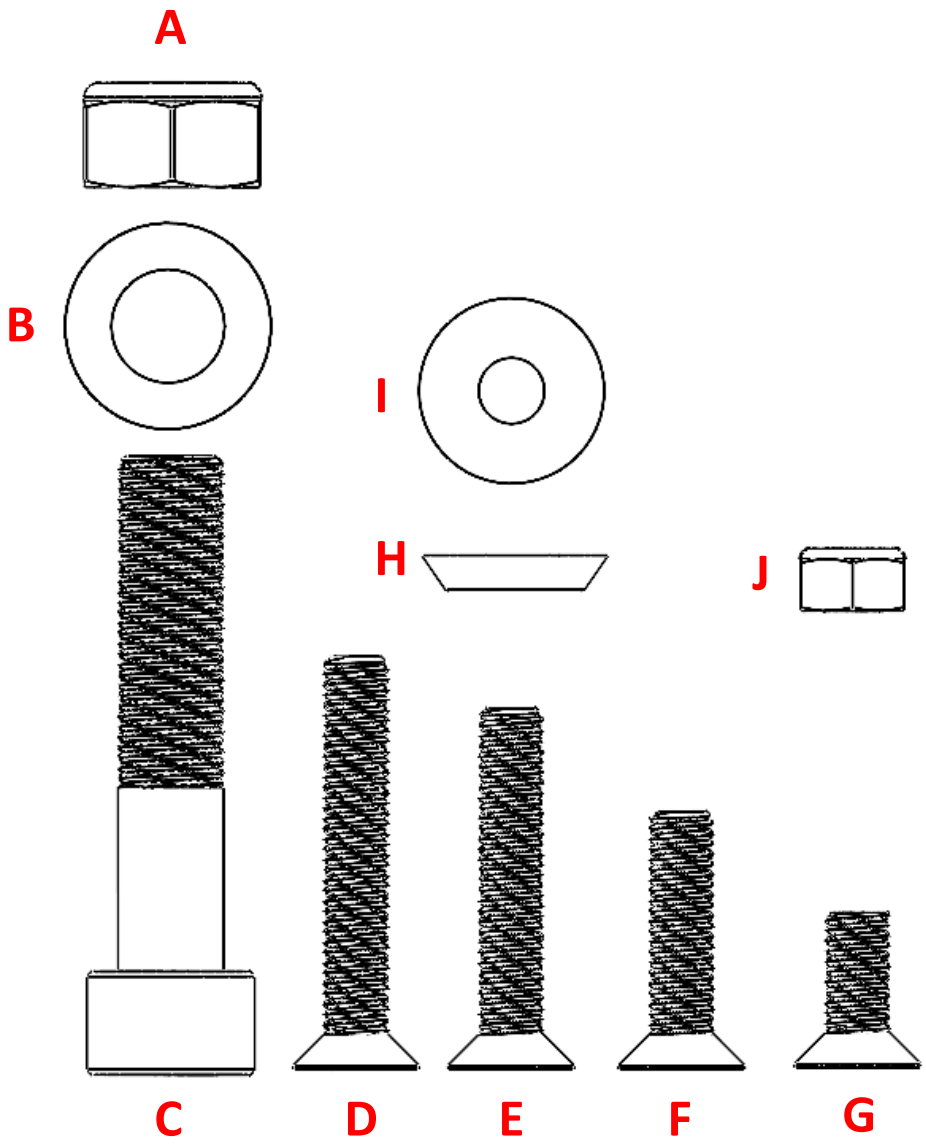

Step A –Install Mounting Block Near Rear Shock

1. Install plastic block.
2. Use M10x60 bolt, inserted from the kickstand side of the bike.
3. Use a washer on each side and torque with provided locknut.
4. For extra assurance, use medium strength thread locker.

Hardware Needed: A, B, C

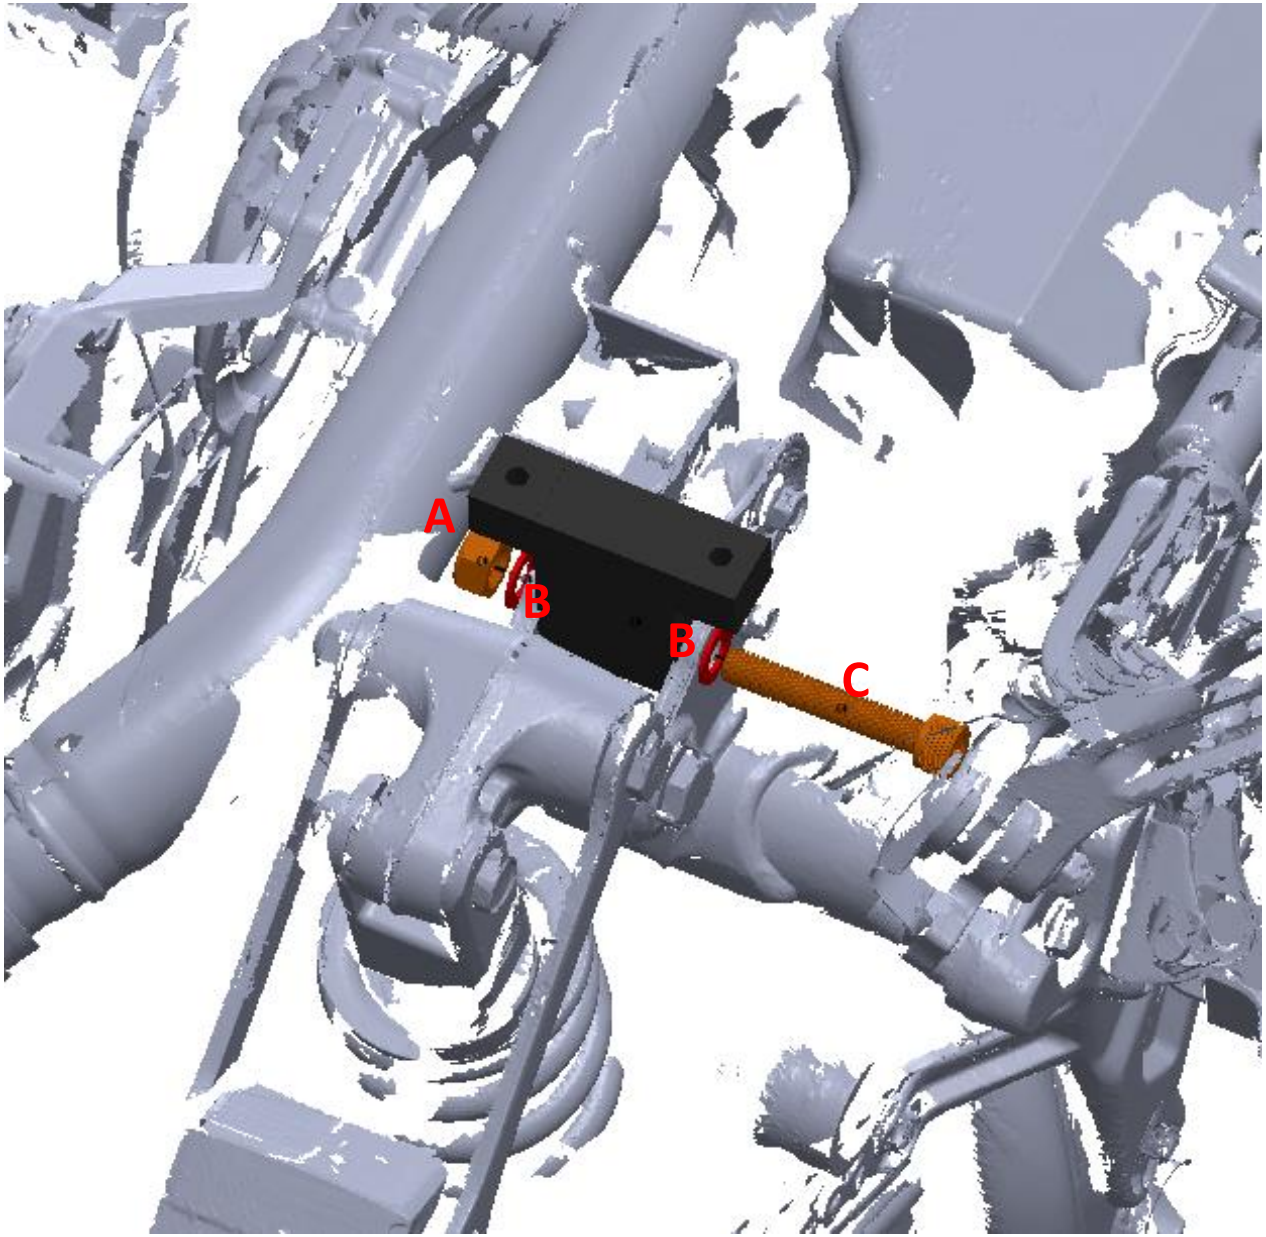

Step B – Install the Linkage Guard

1. Ensure that all bolts thread completely through the locknuts provided.

Hardware Needed: G, E, I, J

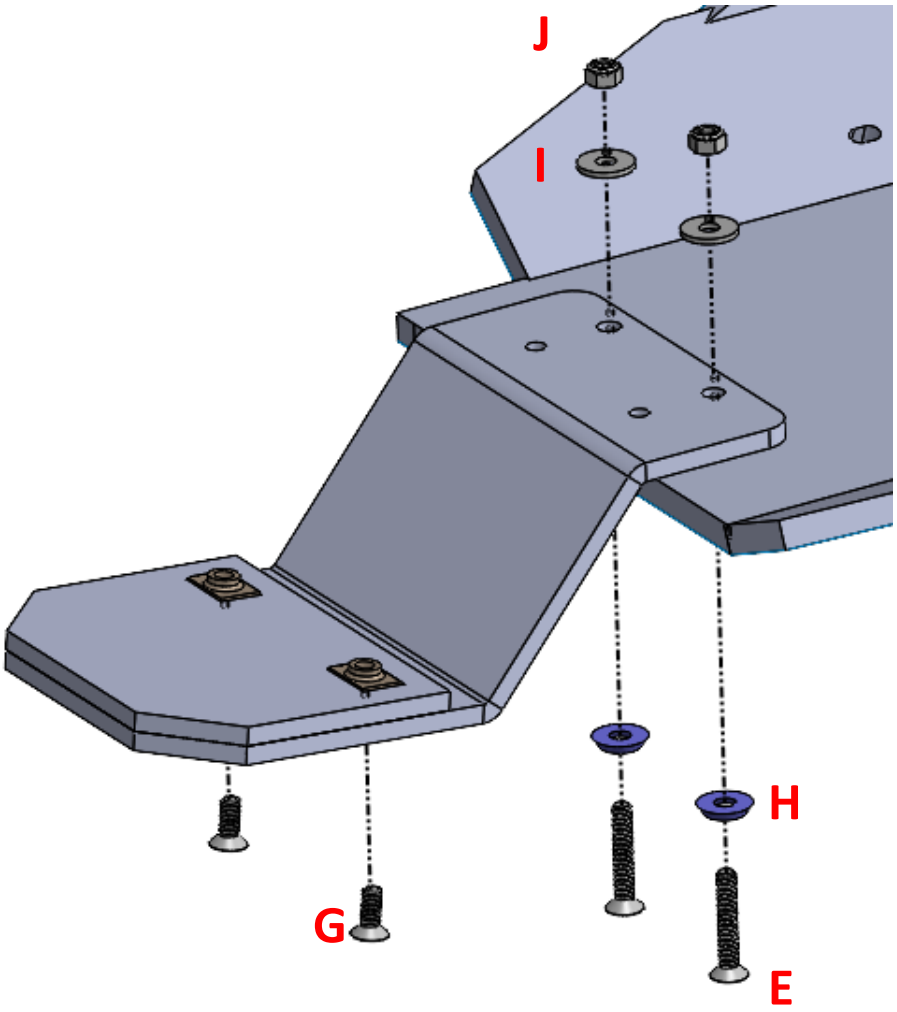

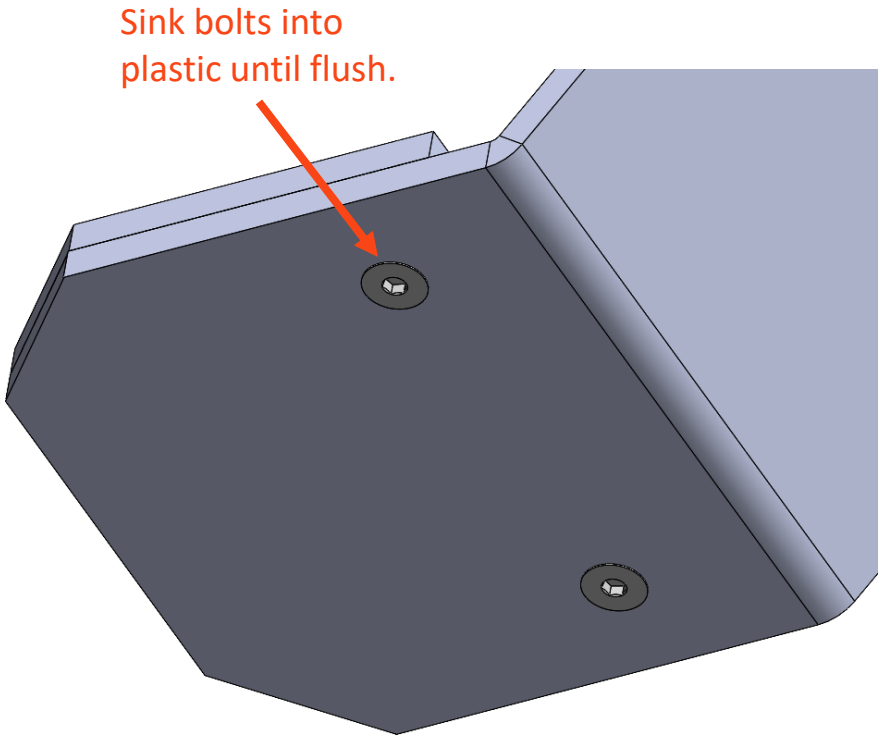

Step C – Install onto Motorcycle

1. Start all bolts by hand first. Then torque.
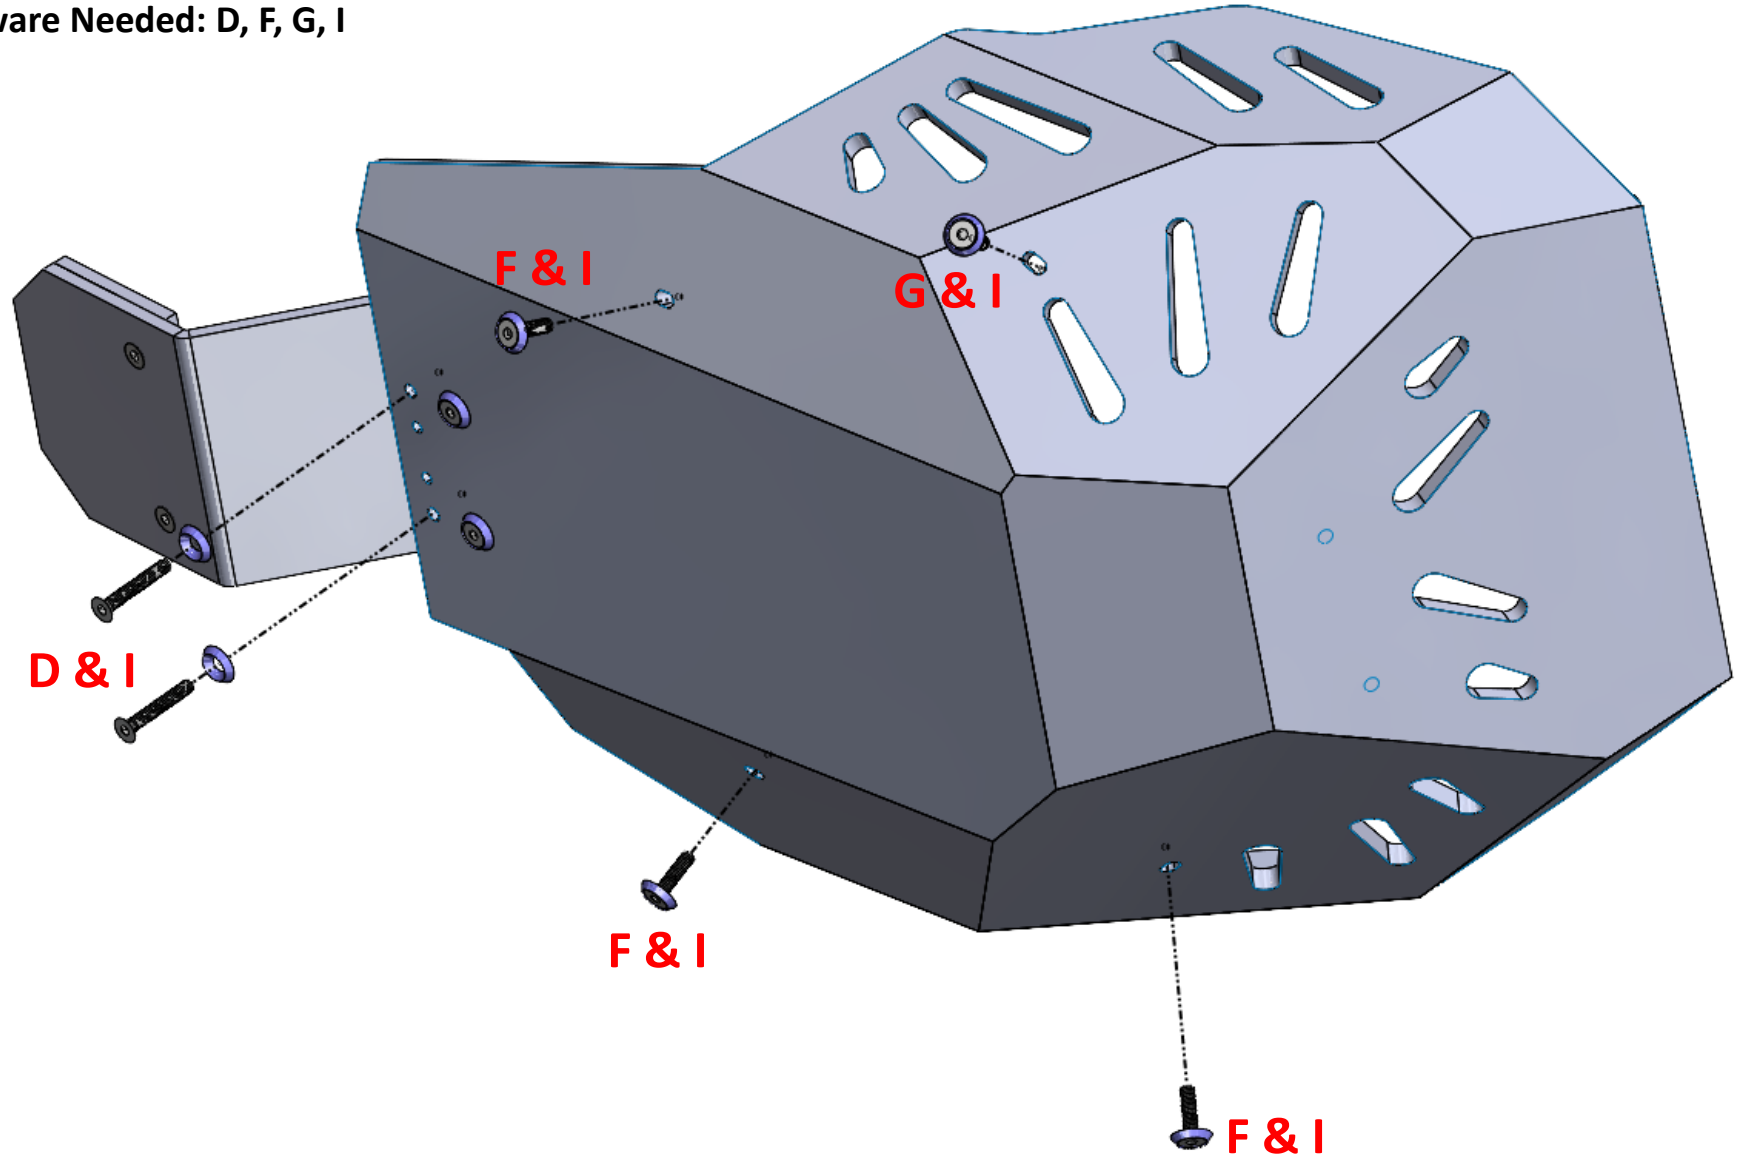
Hardware Needed: D, F, G, I