Skidplate Installation Instructions

1. Position the mounting bar in the frame of the motorcycle (see tips below).
2. Use hardware **(C)** and **(D)** to loosely attach rear hook.
3. Holding the skidplate below the motorcycle, bend the linkage guard away from the swingarm and rotate the mounting hook into and around the rear crossbar of the frame.
4. Use bolts **(A)** or **(B)** and the washers to attach the plate to the mounting bar/frame of the bike.
5. Torque all of the hardware.

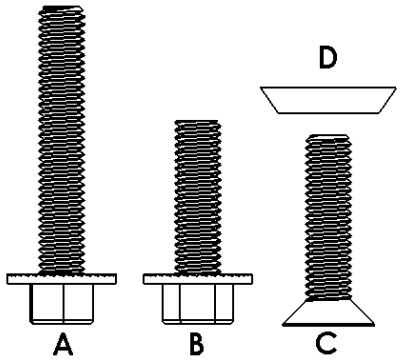

Skidplate Hardware

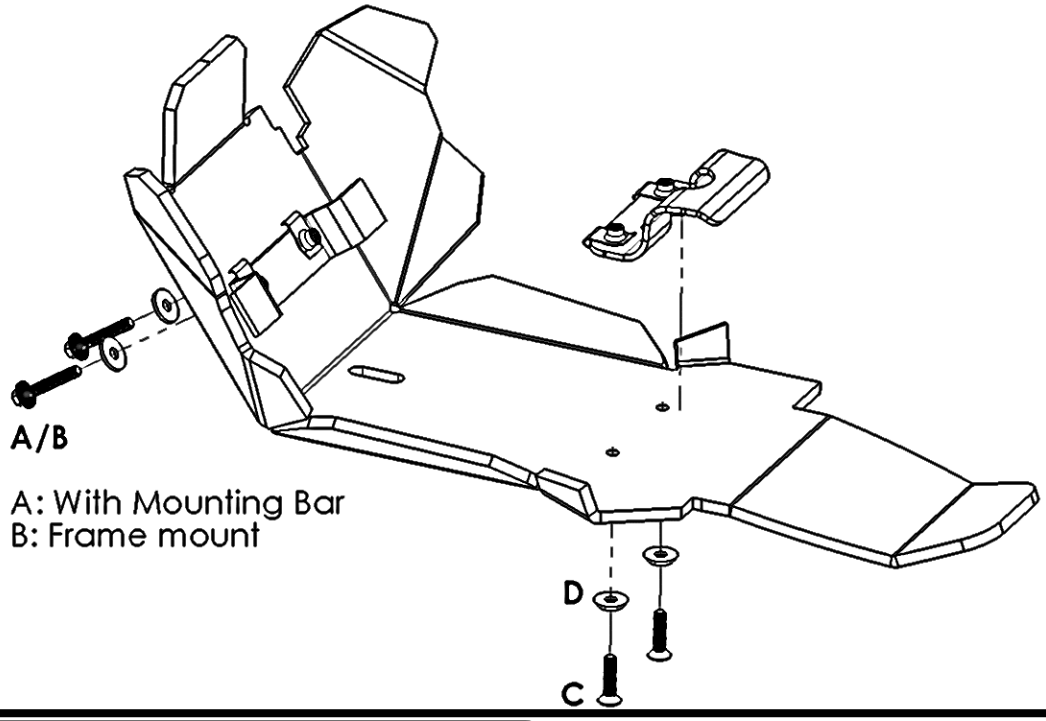

Mounting Bar

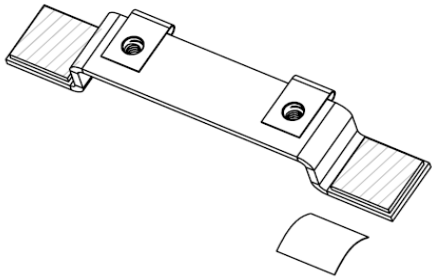

*The mounting bar comes with double-sided adhesive tape to **make future oil changes a breeze**. The **motorcycle frame must be cleaned thoroughly for the tape to stick**.*

- Position the mounting bar in the frame and then mount the rear of the skidplate to the bike (steps 1 -5). **Mark the desired position for the mounting bar before removing the tape liner**.

Remove the skidplate and mounting bar. Remove the liner from the adhesive tape and **stick the mounting bar to the frame in the marked location**. This tape requires pressure; use some force.

Linkage Guard Bend

Bend the linkage guard downwards as needed to assist with installation.

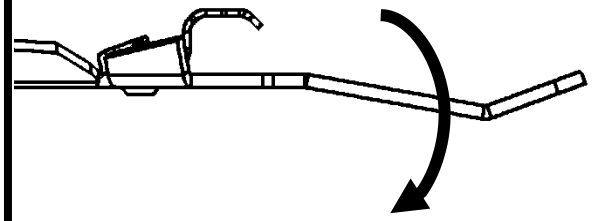

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.