KTM 250/390 Skidplate Installation Instructions

Step 1: Assemble Brackets to Skidplate

- Assemble as shown below. Nylon nuts are supplied so thread locker is optional but not necessary. Tighten all bolts/nuts snug.
- Ensure that front bracket is orientated correctly.

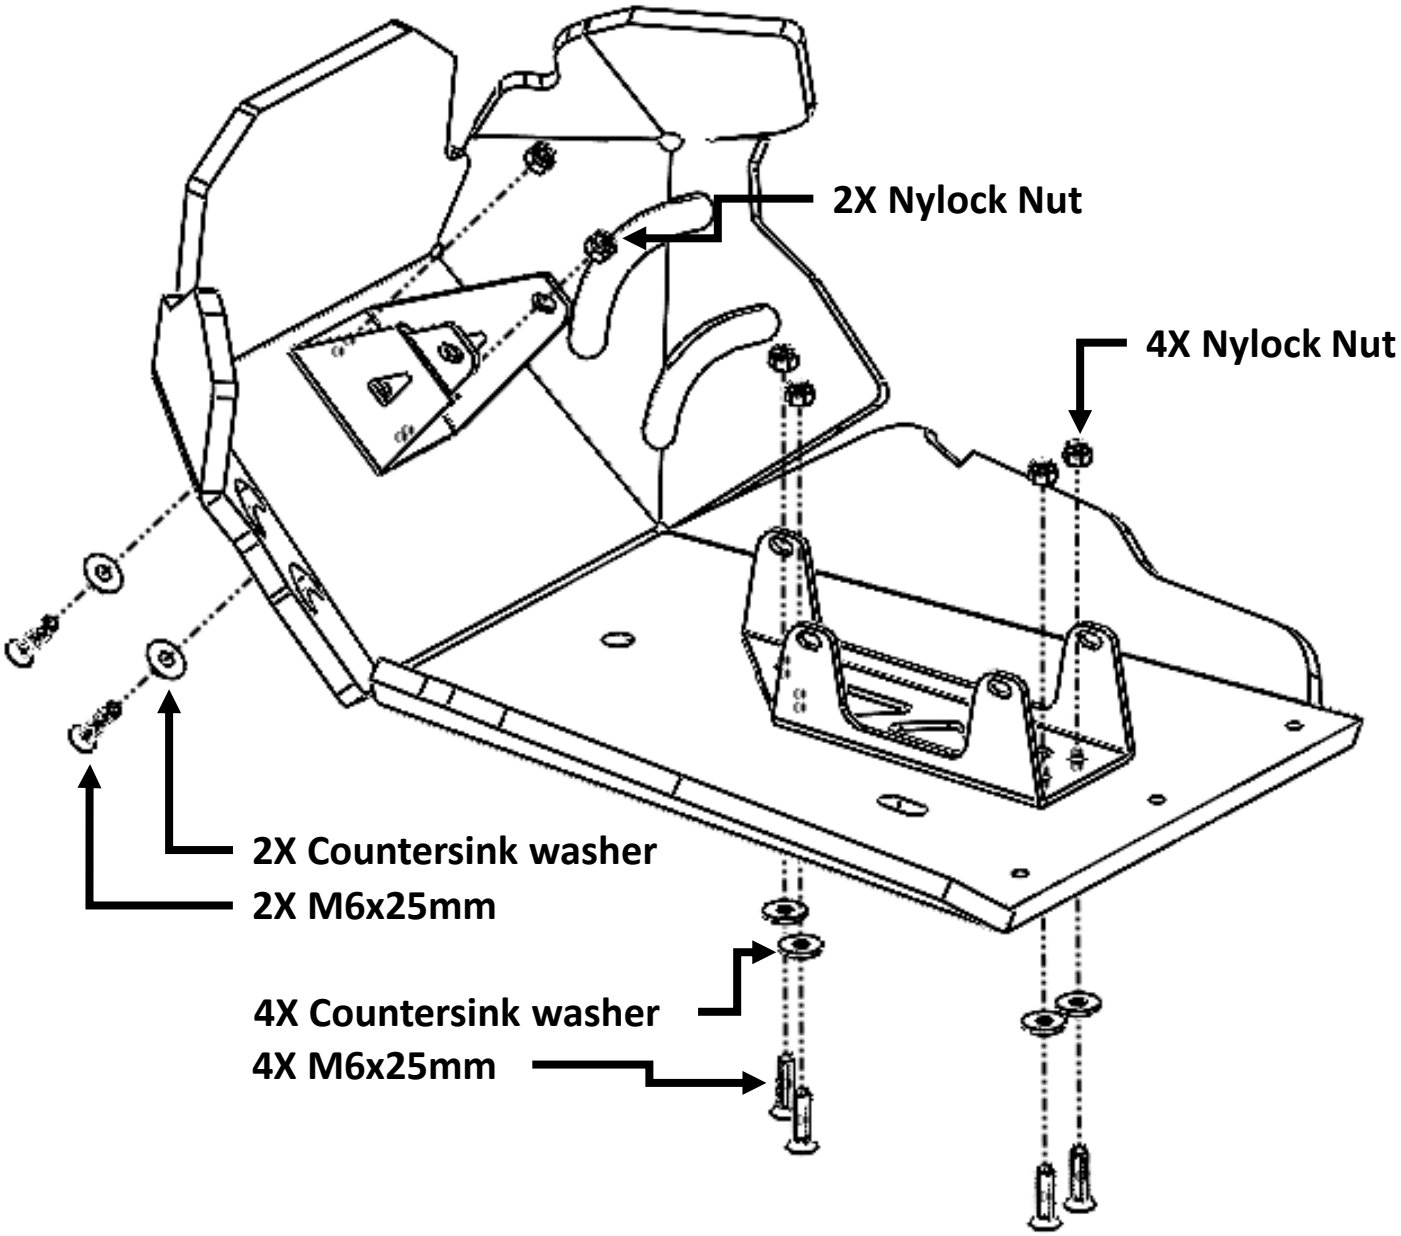

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

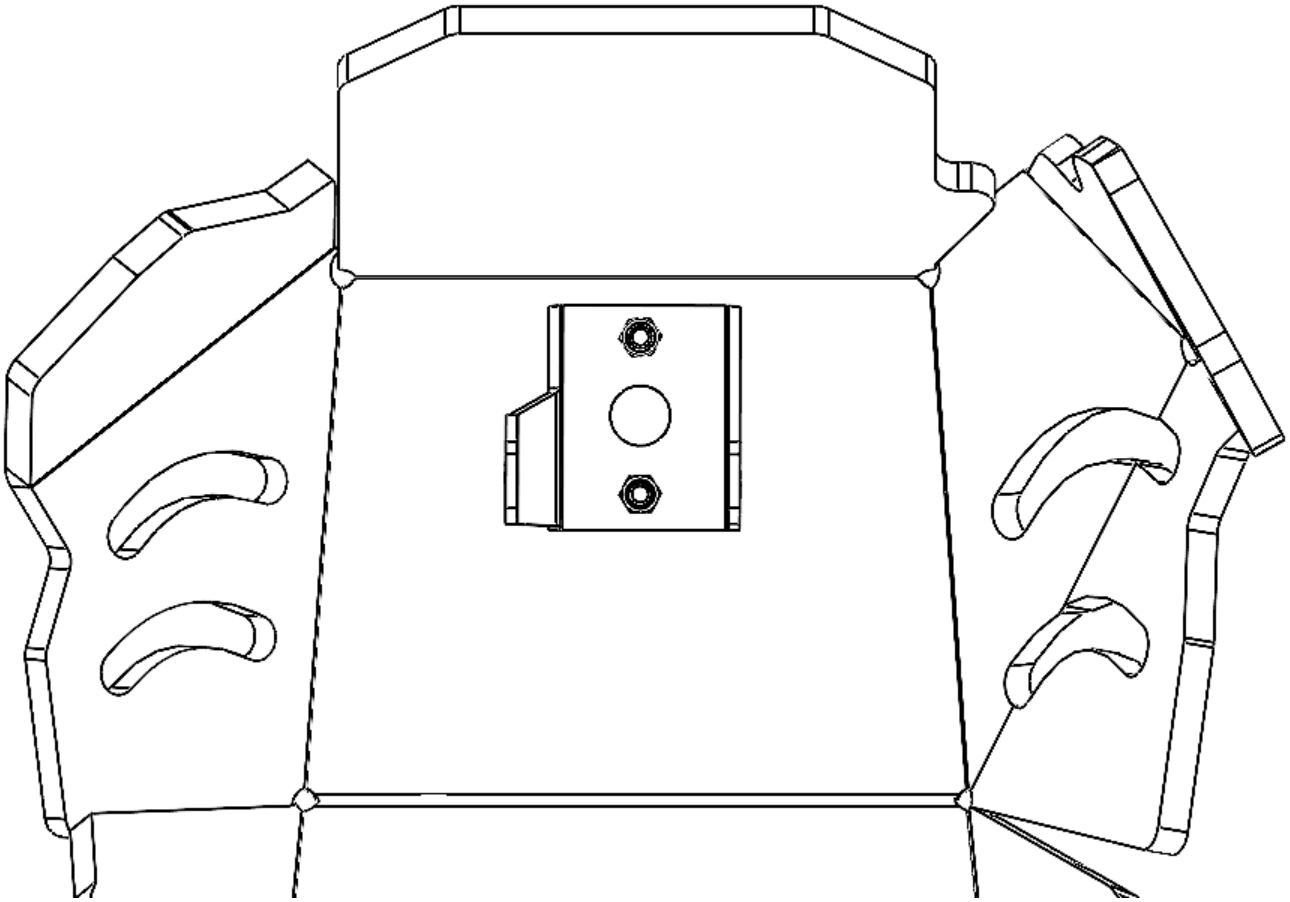

Front bracket orientation

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Step 2: Assemble Linkage Guard

- Assemble linkage guard as shown below. Linkage guard should lap over the top of the skidplate.
- Nylon nuts are supplied so thread locker is optional but not necessary. Tighten all bolts/nuts snug.

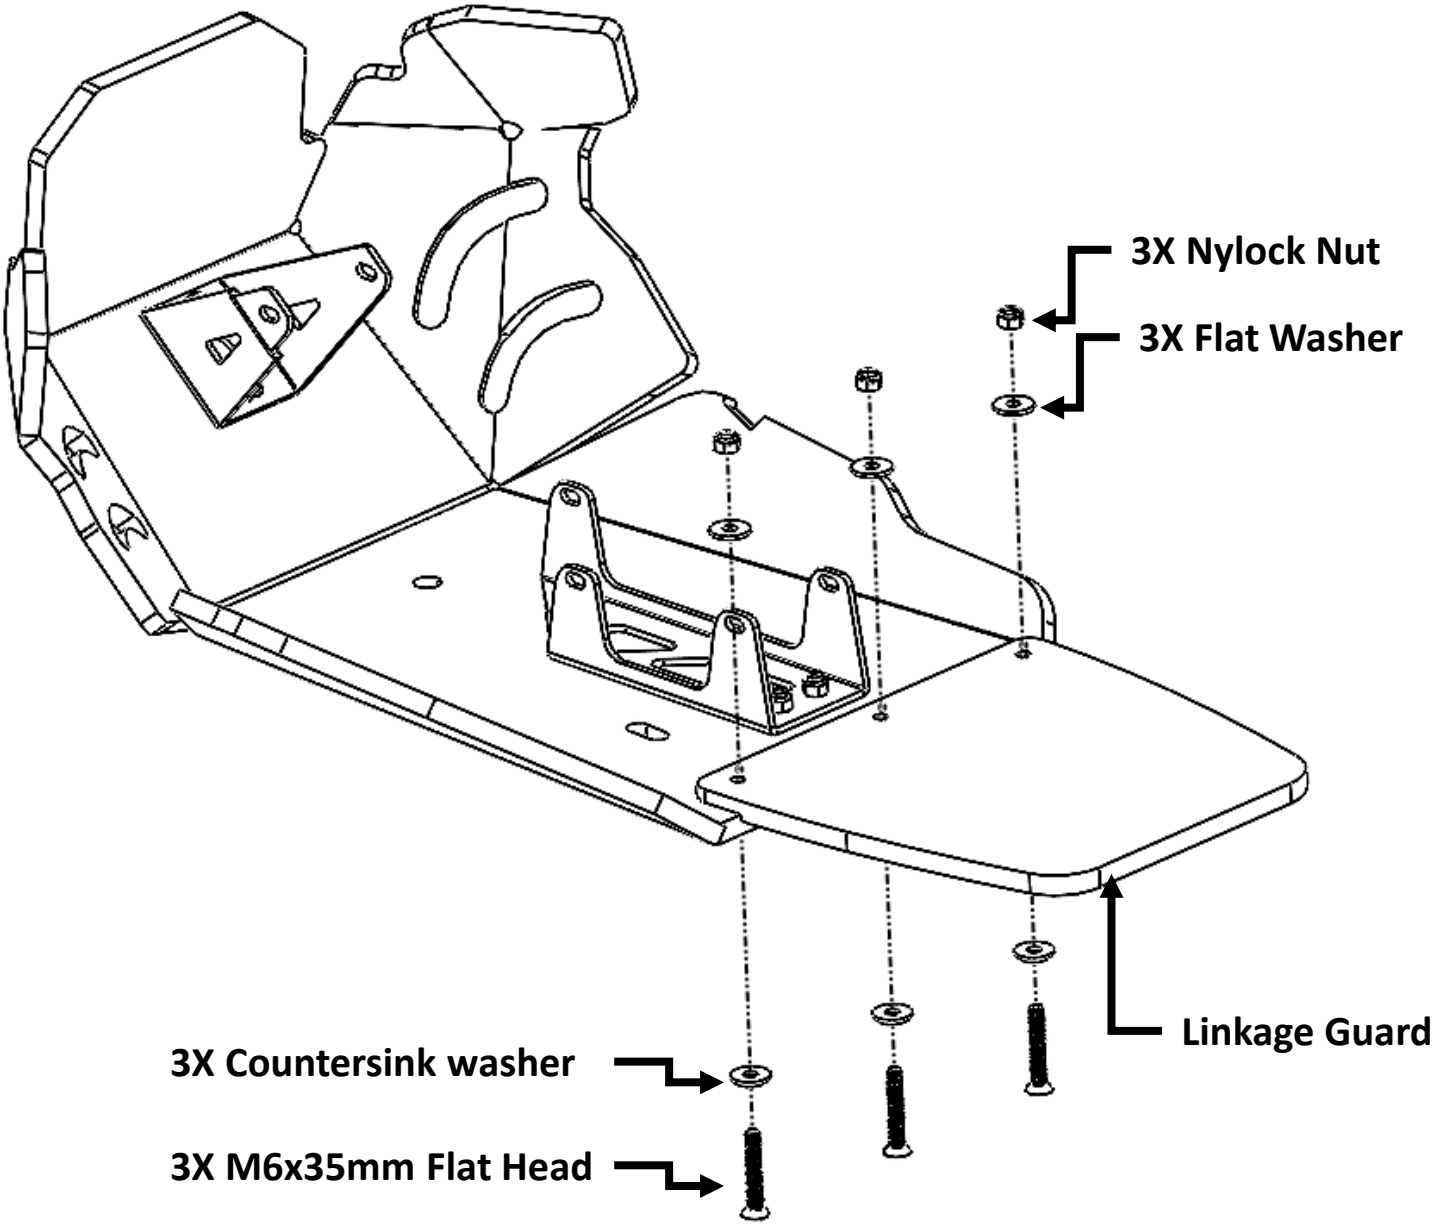

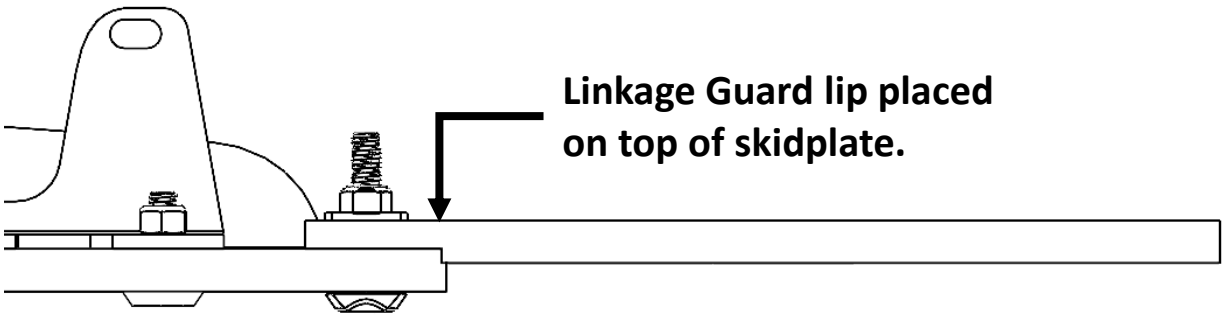

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Step 3: Mount to Motorcycle

- Remove OEM skidplate.
- Use 6X remaining 20mm torx head bolts to mount the metal brackets to the motorcycle. Thread locker is recommended.

Right Side Mounting Points

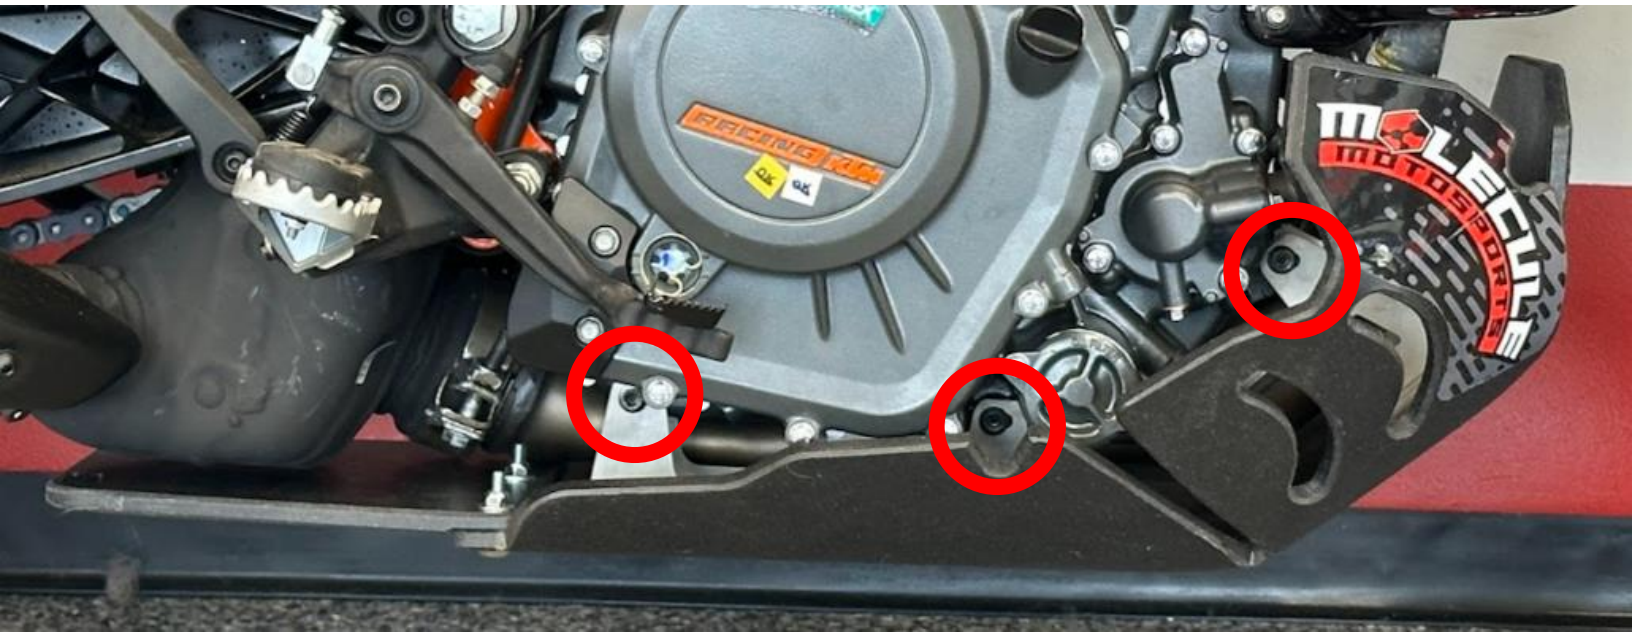

Left Side Mounting Points

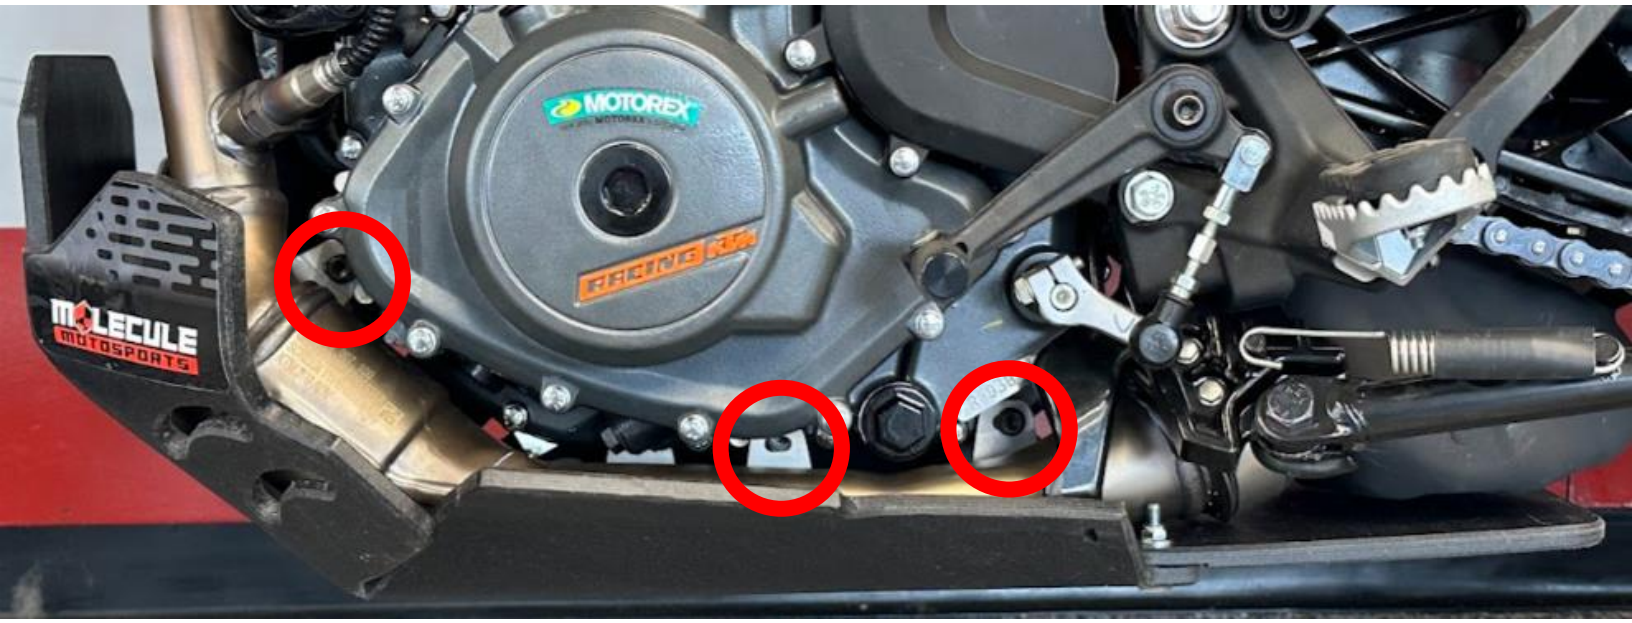

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.