Skidplate and Linkage Guard Installation Instructions

1. Refer to skidplate assembly images first (top right).
2. Bolts **(D)** should be fully tightened to the nylock nuts **(A)**.
3. If using a linkage guard, the plastic can be bent to the shape desired. Heat is recommended but not necessary.
4. Lastly attach skidplate to motorcycle.

Linkage Guard Assembly

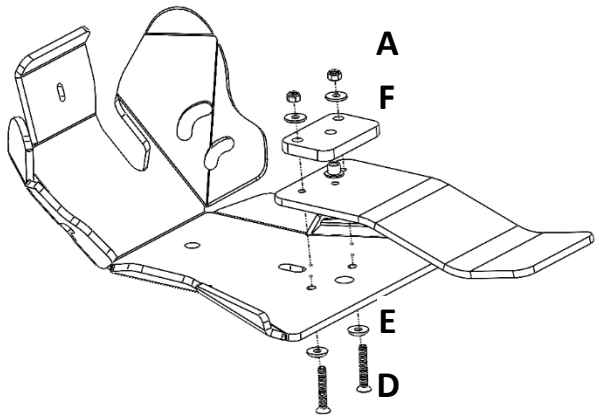

No Linkage Guard

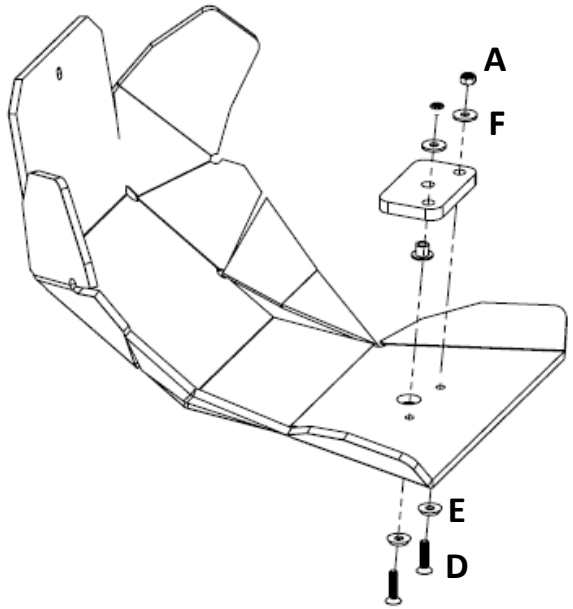

Hardware

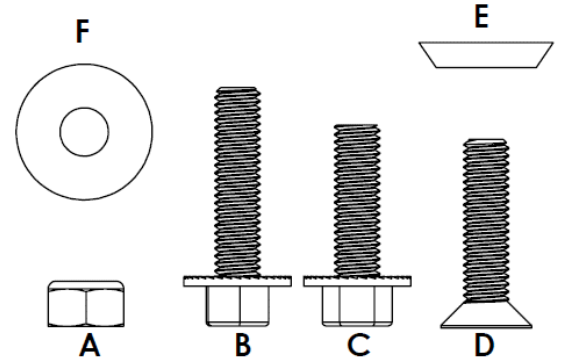

Installation onto Bike

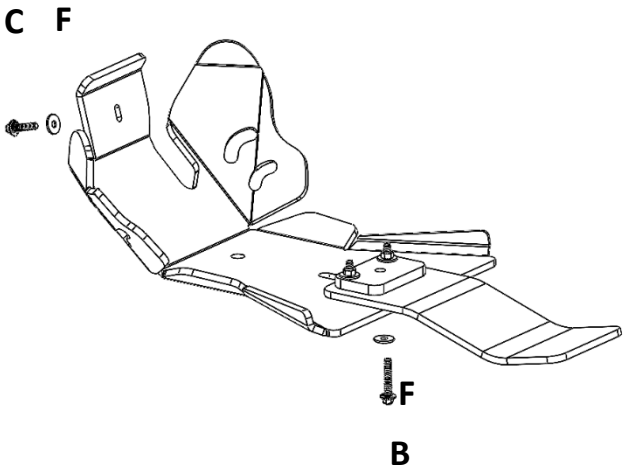

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.