2024 KOVE 450 Rally Skidplate Instructions

Hardware Chart:

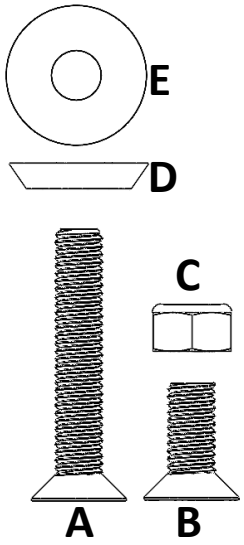

Step 1 – Install Linkage Pad

- Drive **2X Bolts (B)** in until flush with the plastic.

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Step 2 – Attach Heat Protective Tape

- Clean the area to be applied with alcohol. Remove backing off tape and apply to skidplate as shown below.

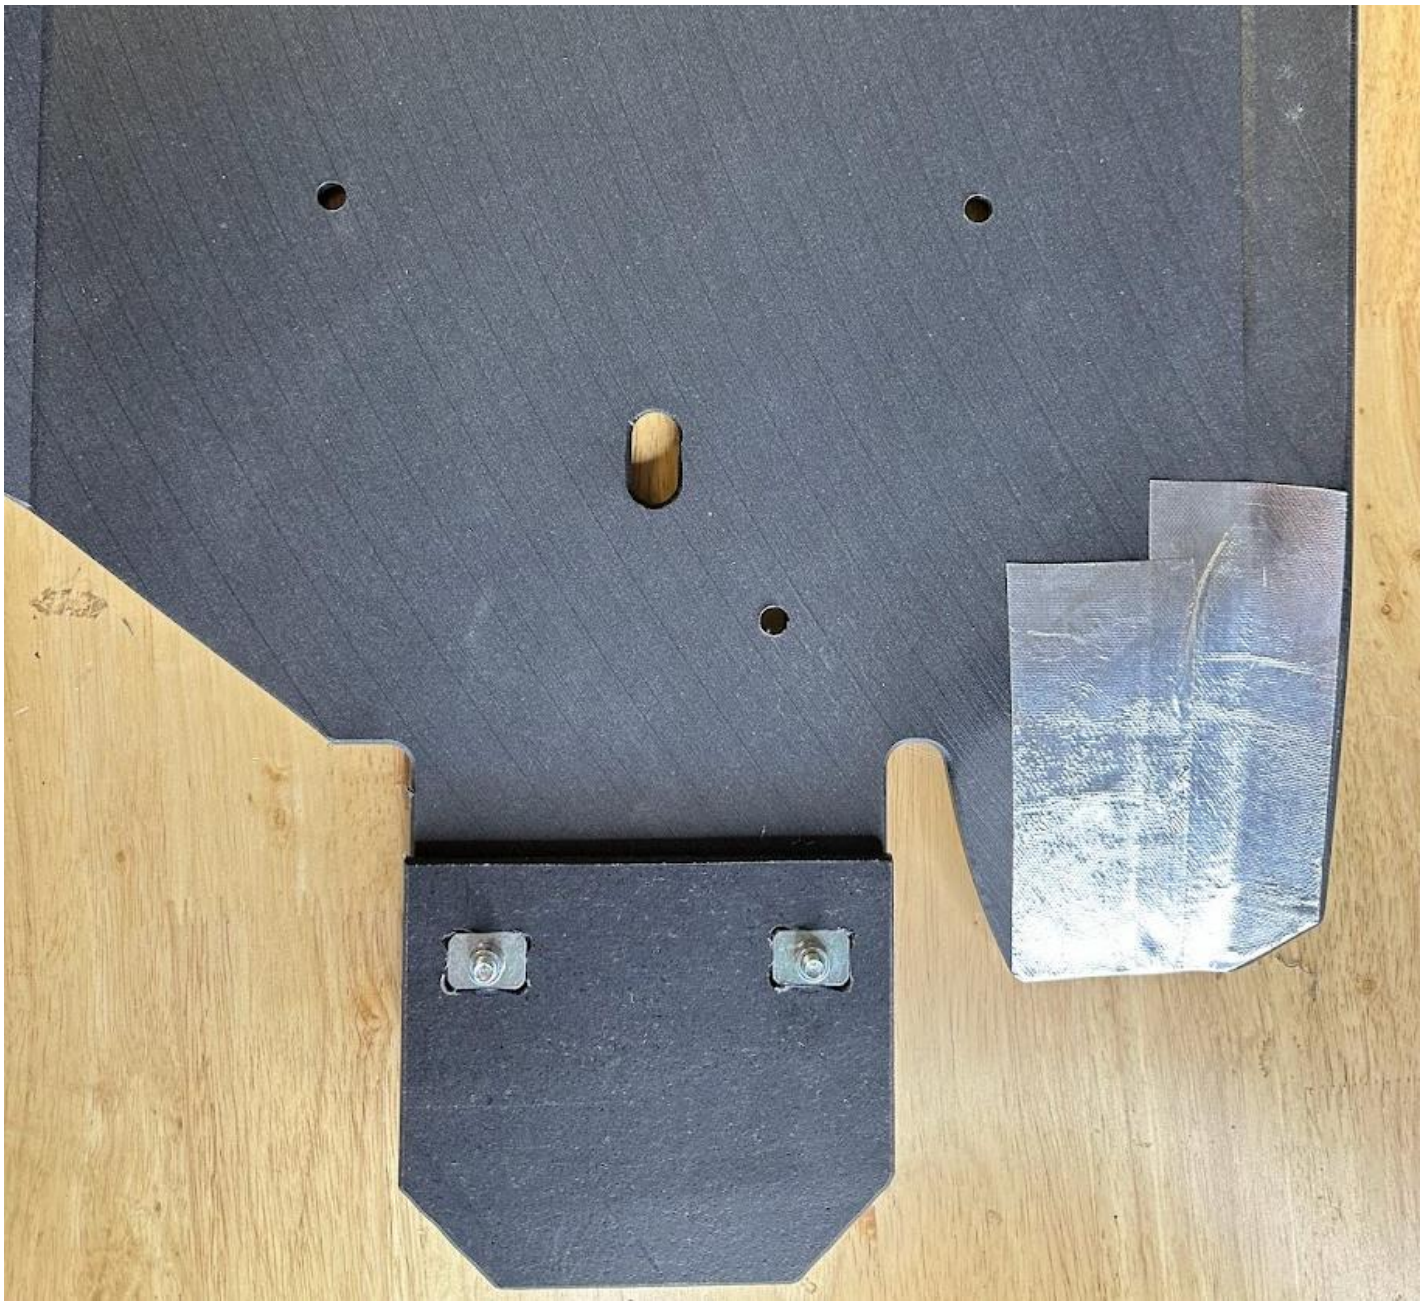

Step 3 – Attach to OEM Skidplate

- Use OEM skidplate as a template for drilling holes. Begin with the three holes shown below.
- Install hardware **(A) and (D)** in from the bottom. Then install the washer **(E)** and nut **(C)** on the top of the OEM skidplate. Tighten. (This hardware will become permanent.

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Step 4 – Drill Mounting Holes

- Using the OEM skidplate as a template again, drill remaining 4 holes show below.

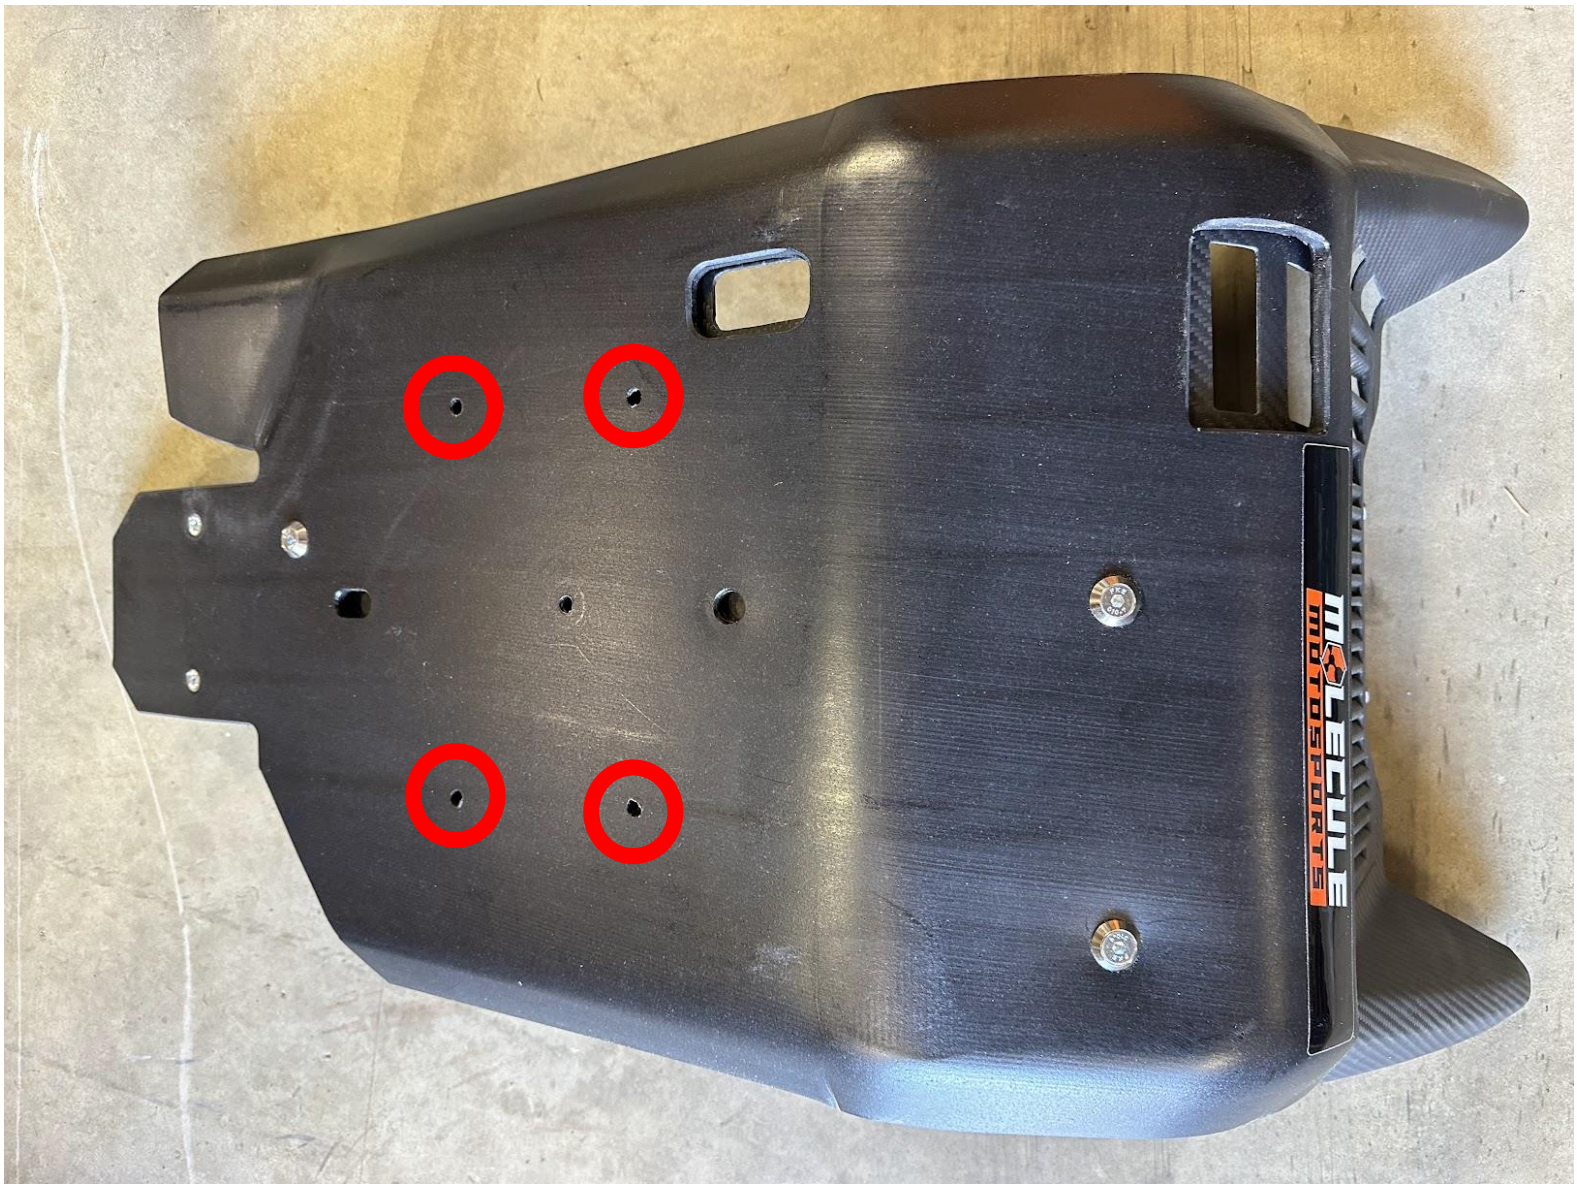

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Step 5 – Mount to the Bike

- Install the factory front bolt first.
- Install the 4X bolt **(A)** and countersink washer **(D)** near the rear of the skidplate.

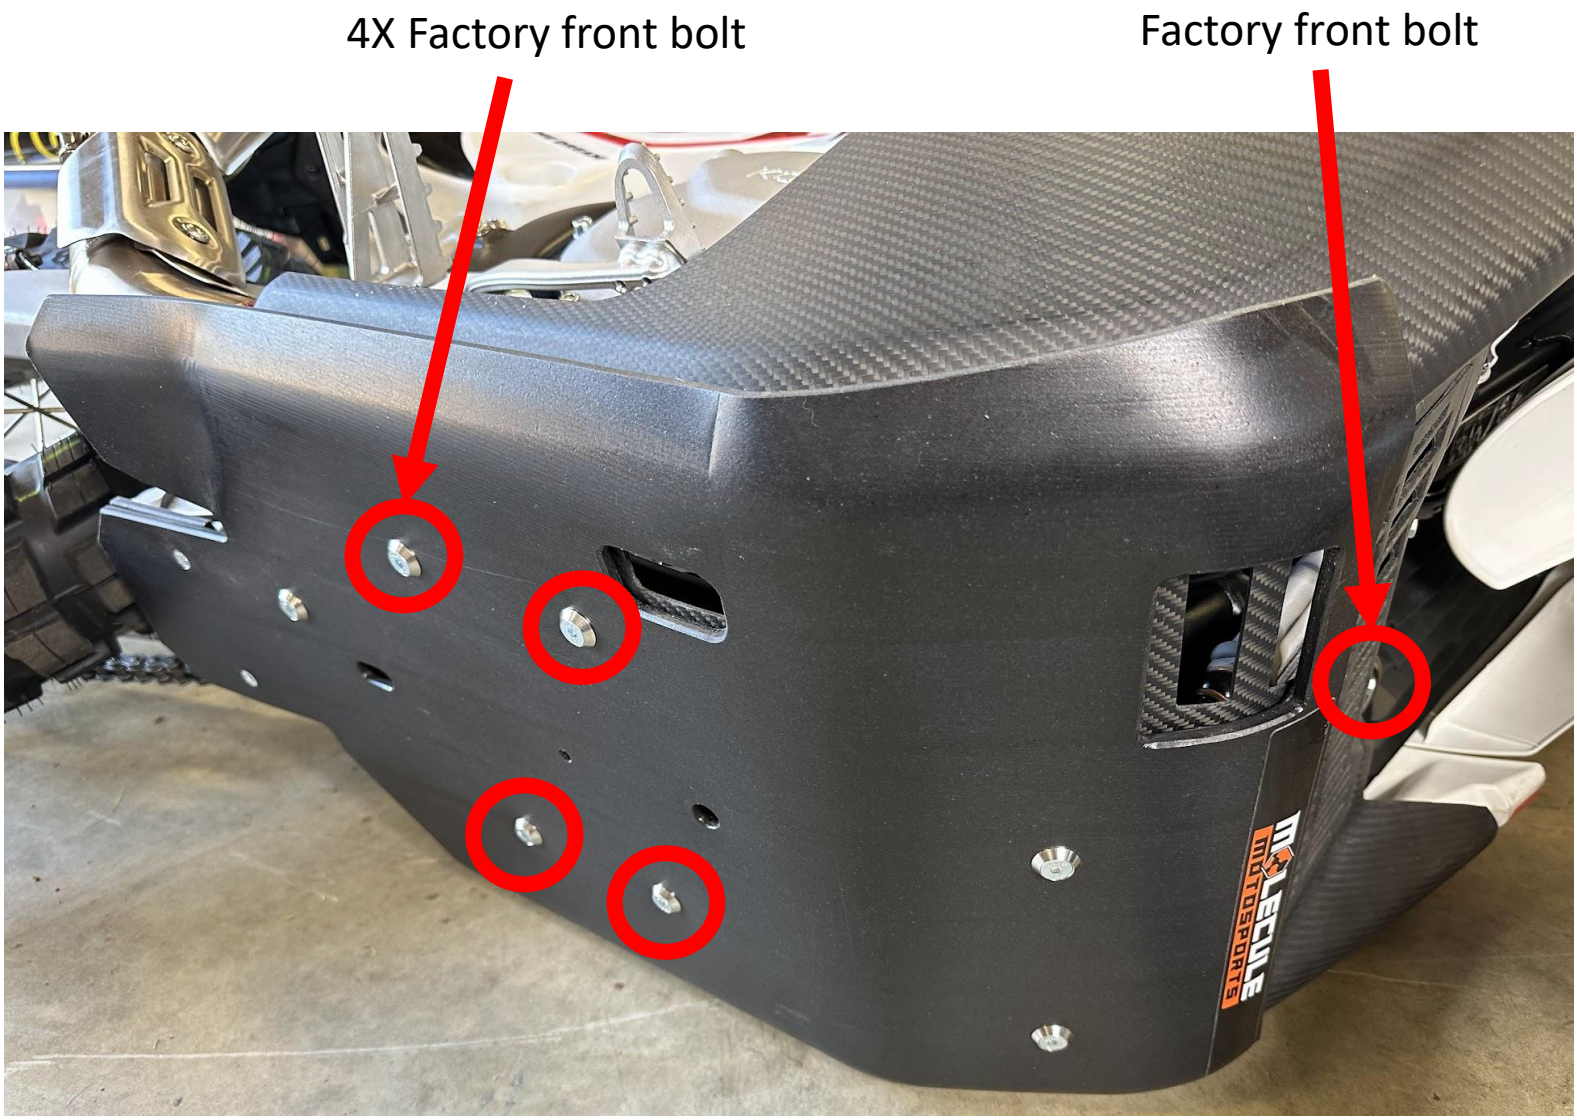

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Questions?

https://www.moleculemoto.com/support

OR

info@moleculemoto.com