Skidplate and Linkage Guard Installation Instructions

1. **Skidplate Assembly**
   A. Assemble the front bracket (*Figure 1*).
   B. Install the plastic bumper pad using 4X of Bolt (F) and the locking Nuts (G). Tighten bolts till flush with bottom of skidplate (*Figure 2*).
   C. Install the mounting bracket using 2X of Bolt (B) and 2X of Washer (C). We recommend using medium thread lock in this step.
   D. Lastly, install the black anodized mounting pins using 4X of Bolt (F), 4X of Ferrel (E), and medium thread locker.
2. **Bike Installation**
   A. Push the two pins of the skidplate into the rubber iso mounts located on the frame of the bike (*Figure 3*).
   B. Use 2X of Bolt (A) to secure the front mounting bracket to the frame. Note the bolt type may differer depending on bike year.
   C. Lastly, install Bolt (D) and Ferrel (E) through the rear slave cylinder mounting bolt and secure with a lock Nut (G).

Figure 1 – Bracket Assembly

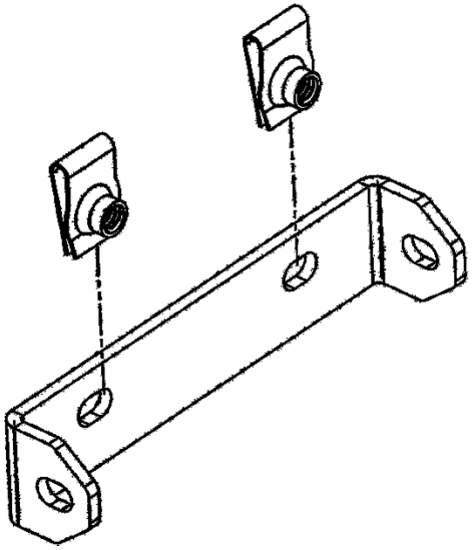

Figure 2 – Plate Preparation

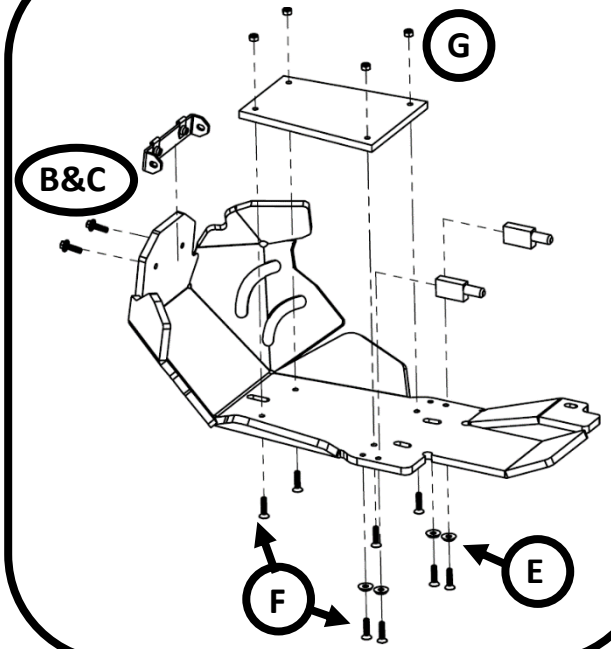

Bolt Chart

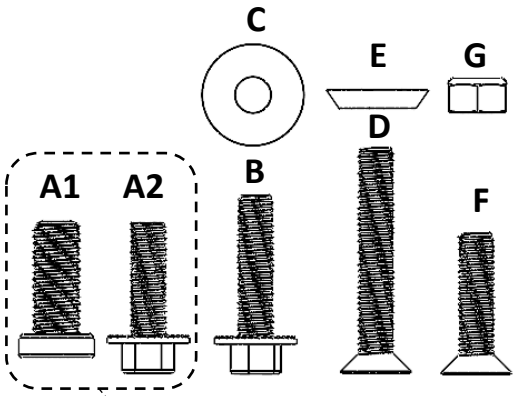

***A1**: 2026+ MODELS*

***A2**: OLDER MODELS*

Figure 3 – Installation onto Bike

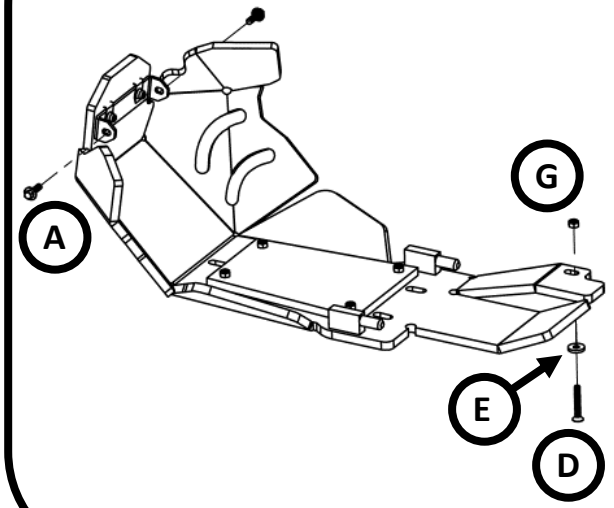

Neither Molecule Motosports nor Vanasche Motorsports will be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.