Skidplate and Linkage Guard Installation Instructions

1. Install linkage guard pad using bolts (D).
2. Install supplied bracket to front of frame using bolts (B). Adjustments can be made using the slotted feature but once the bracket has been mounted, it should generally stay there permanently attached to the bike.
3. The skidplate can now be mounted as shown in Figure 3.
4. Lastly, torque all bolts.

Figure 1 – Linkage Guard Pad

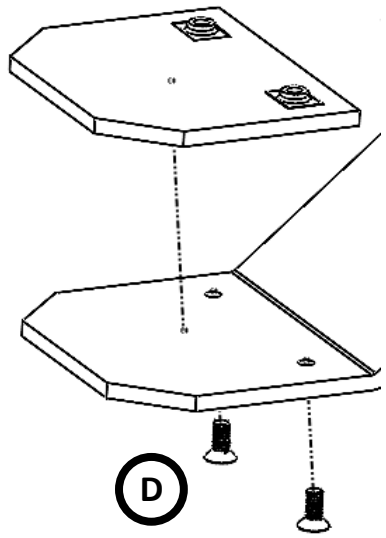

Note: Tighten D until the head of the bolt is flush with the plastic.

Figure 2 – Front Frame Bracket

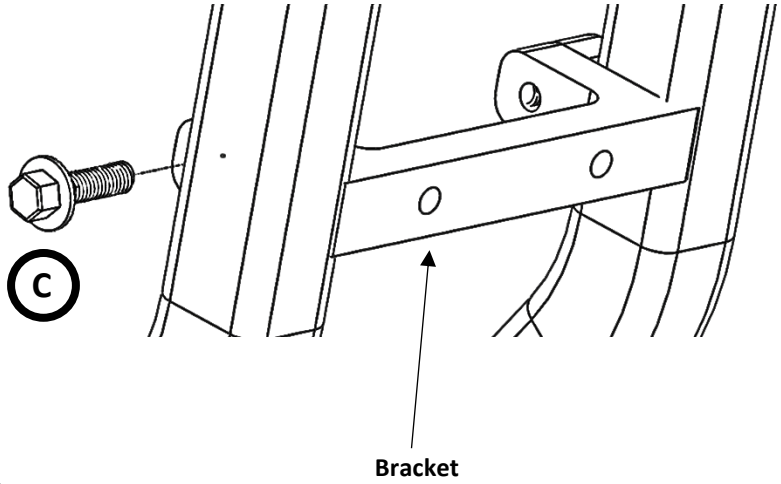

Hardware Diagram

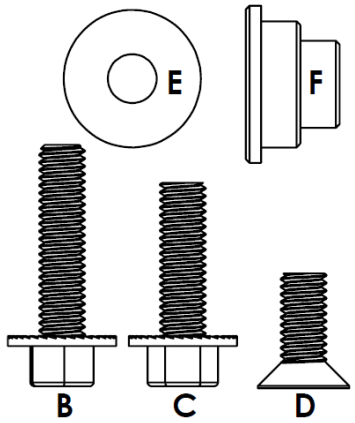

Linkage Guard Bend

Bend the linkage guard downwards as needed. This plastic can be bent to shape cold or using heat and it will keep its shape.

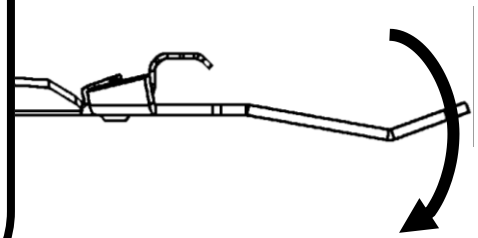

Figure 3 – Assy of Skidplate to Motorcycle

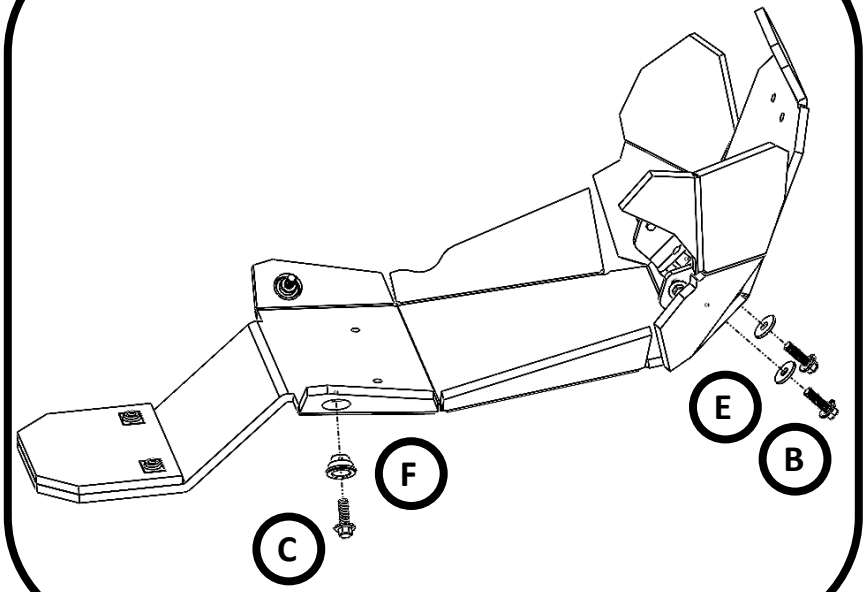

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.