WR/YZF 250/450 Skidplate Installation Instructions

SKU: SP-WR250-26(B/L), SPOB-WR250-26(B/L)

Hardware Supplied

Not all hardware shown will be included with your specific model.

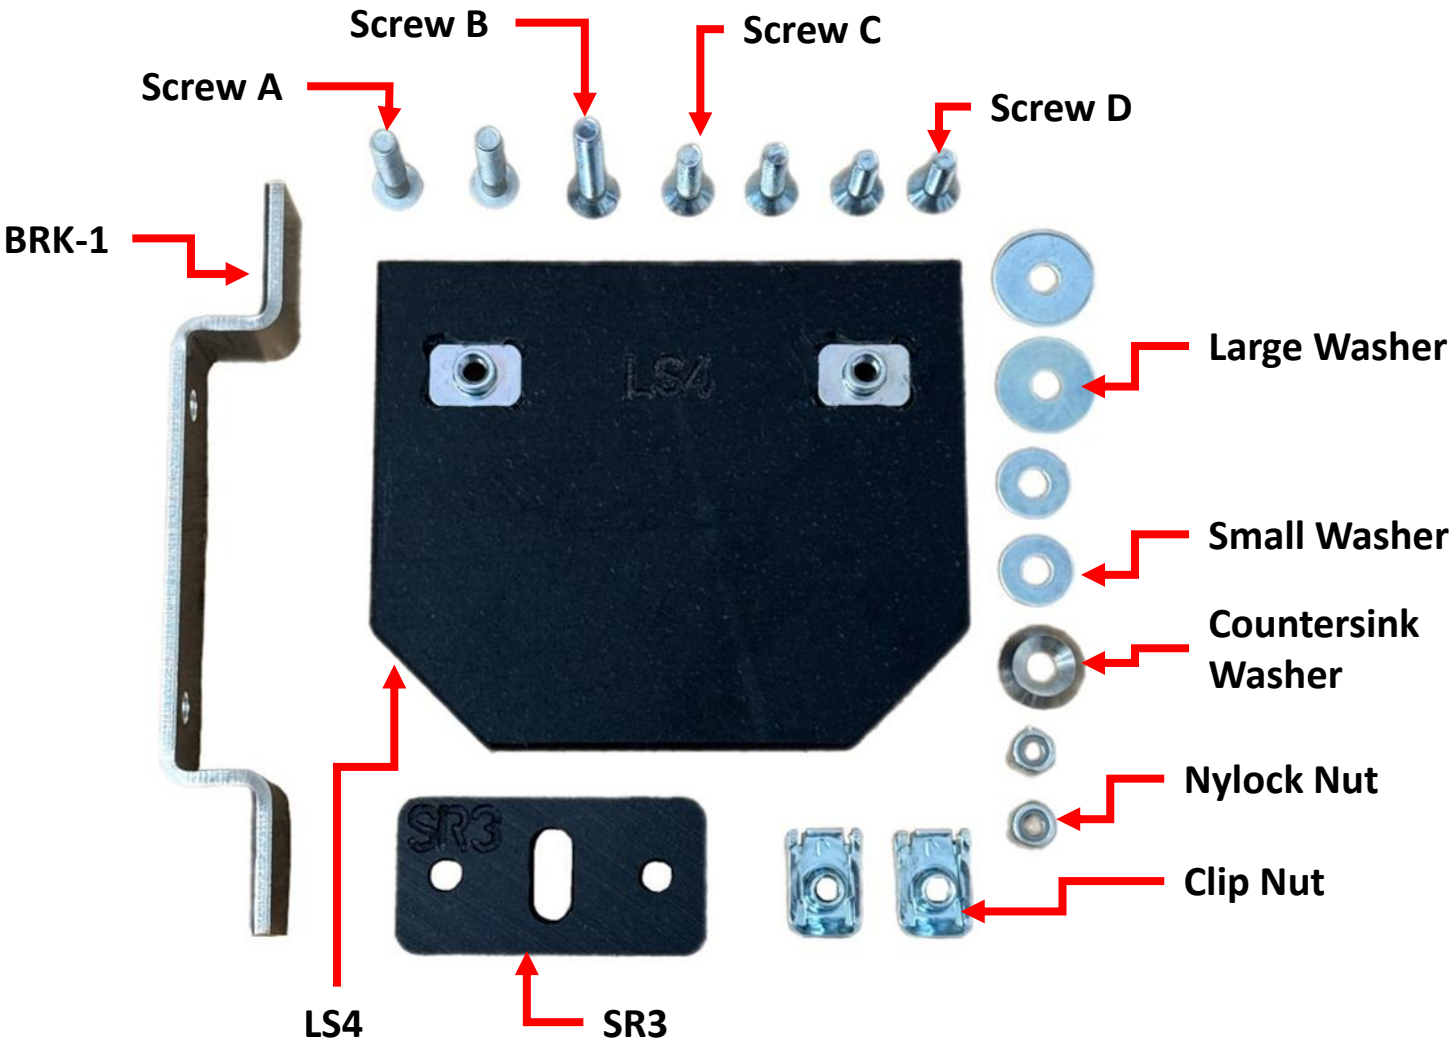

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Step 1 (YZF models only):
WR Models have mounting holes in the frame and do not require a front mounting bracket.

Attach **Clip Nuts** to **BRK-1** as shown below.

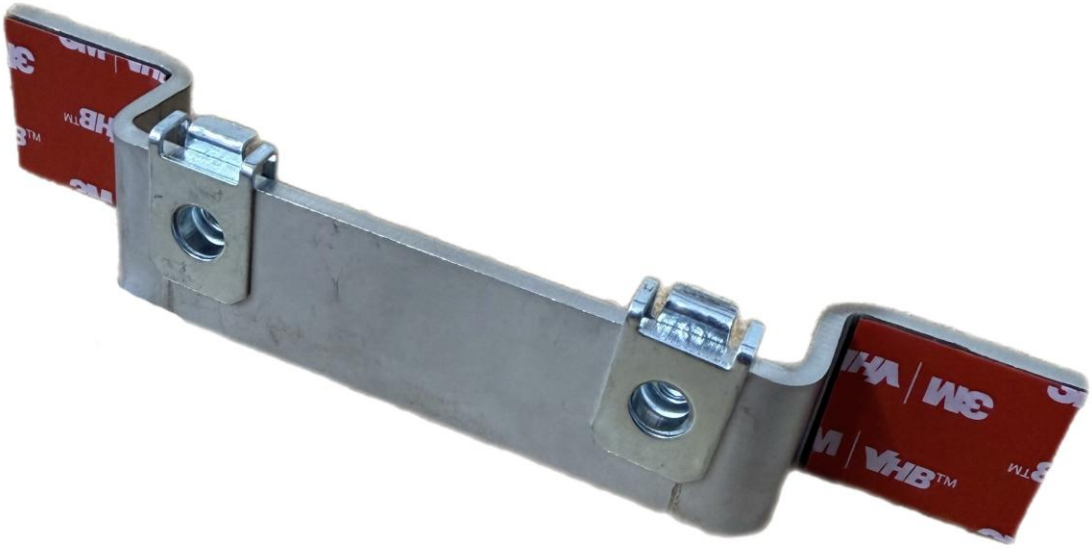

Step 2: Assemble Linkage Spring

- Attach **LS4** to the rear of the skidplate using **2X Screw D (shortest flat head screw)**.
- Tighten till screws are flush with plastic.

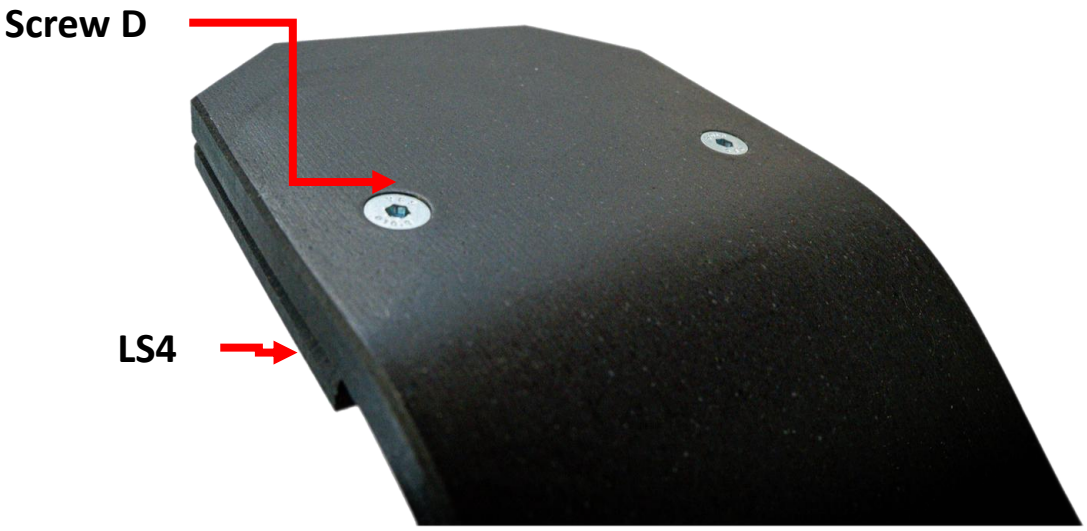

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Step 3: Attach Spacer to Skidplate

- Using **2X Screw C, 2X Small Washers, and 2X Nylock Nuts**, assemble **SR3** to the skidplate as shown below.
- Tighten the screws till they are flush with the bottom of the skidplate.

Step 4: Mount to Motorcycle (Front Side)

Note: WR models use the mounting holes in the frame. YZF models use the supplied front mounting bracket.

- Use **2X Large Washers** and **2X Screw A.**
- Loosely install the screws and washers though the skidplate and into the frame (or bracket).

Molecule Motosports will not be responsible for any damages, loss of revenue, and/or personal injury caused or resulting from the installation of these parts or modifications made during installation.

Step 5: Mount to Motorcycle (Rear side)

- Use **Screw B and Countersink Washer** to install the rear of the skidplate into the frame of the bike.
- **Tighten Screw B and Screws A fully.**